



Audio 20

Operating Instructions



1665845404

Order no. 6515 7380 13 Part no. 166 584 54 04 Edition D-2016



Mercedes-Benz

Symbols

In this Operator's Manual you will find the following symbols:

WARNING

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

Environmental note

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 Practical tips or further information that could be helpful to you.

- ▶ This symbol indicates an instruction that must be followed.
- ▶ Several of these symbols in succession indicate an instruction with several steps.
- (▷ This symbol tells you where you can find more information about a topic.
- Dis-** This text indicates a message on the multifunction display or on the multimedia system display.

Parts of the software in the vehicle are protected by copyright© 2005 The FreeType Project <http://www.freetype.org>. All rights reserved.

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Operator's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service,
70546 Stuttgart, Germany

©Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

Vehicle manufacturer

Daimler AG
Mercedesstraße 137
70327 Stuttgart
Germany

Welcome to the world of Mercedes-Benz

First of all, familiarize yourself with your multimedia system. Read these operating instructions, particularly the safety and warning notes, before you drive off.

This will help you to obtain the maximum pleasure from your multimedia system and avoid endangering yourself and others.

The equipment level and functions of your multimedia system may differ depending on:

- Model
- Order
- Country specification
- Availability

Mercedes-Benz is constantly updating its vehicles to the state of the art.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

Consult an authorized Mercedes-Benz Center if you have further questions.

The Operator's Manual and all supplements are integral parts of the vehicle. You should always keep it in the vehicle and pass it on to the new owner if you sell the vehicle.

The technical documentation team at Daimler AG wishes you safe and pleasant motor-ing.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

Index 3

Introduction 9

Overview and operation 13

System settings 21

Vehicle functions 28

Navigation 35

Telephone 37

Online and Internet functions 59

Radio 68

Media 76

Sound 92

1, 2, 3 ...

360° camera

- Displaying images 31
- Opening the camera cover for cleaning (Audio 20) 32
- Settings 32

A**Access data of the mobile phone network provider**

- Deleting 62
- Editing 62
- Making entries 61
- Selecting 60

Activating media mode

- General notes 76

Adjusting the volume

- Audio 20 17
- Traffic announcements 17

Ambient light

- Settings (Audio 20) 28

Armrest

- Adjusting (Audio 20) 30

Audio 20

- Adjusting the display 21
- Basic functions 17
- Components 13
- Controller 16
- Display 14
- Functions 13
- Seat functions 30
- Switching on/off 17

Audio CD/MP3 mode

- Switching to 76

Automatic time

- Switching on/off 22

B**Back button** 16**Bluetooth®**

- Activating audio mode 87
- Activating/deactivating 25
- Basic display (audio mode) 86
- Connecting another mobile phone 41
- Connecting audio devices 83

- De-authorizing (de-registering) a device 86
- Device list 84
- Displaying connection details 42
- Entering the passcode 40
- External authorization (audio device) 85
- Interface 37
- Reconnecting an audio device 85
- Searching for a mobile phone 39
- Selecting a playback option 88
- Starting playback if the Bluetooth® audio device has been stopped 87
- Telephony 38
- Telephony notes 37

Buttons and controller 16**C****Call lists**

- Displaying details 51
- Opening and selecting an entry 51

Camera

- 360° camera (Audio 20) 31
- Rear view camera 32

Category list (music search) 81**CD**

- Fast forward/fast rewind 81
- Inserting 79
- Notes on discs 78
- Selecting a track 81
- Sound settings (balance, bass, fader, treble) 92

CD mode

- Playback options 80

Clear button 16**Climate control**

- Ionization (Audio 20) 29

Contacts

- Importing 49

Control panel 15**Controller** 16**Correct use** 9**D****Date format, setting** 24

- Day design, setting** 21
 - Delayed switch-off**
 - Interior lighting 29
 - Settings (Audio 20) 29
 - Destination/route download**
 - Deleting a destination from the server 66
 - Displaying destinations in the vehicle 65
 - Displaying the vehicle identification number (VIN) 66
 - Placing a call at the destination 66
 - Procedure and general information 65
 - Sending destinations to the server 65
 - Using a destination for route guidance 66
 - Using destinations 66
 - Dialing a number (telephone)** 43
 - Display**
 - Notes about cleaning 14
 - Selecting the design 21
 - Switching on/off 22
 - Displaying energy consumption and generated electrical energy (Audio20)** 29
 - DYNAMIC SELECT**
 - Configuration via the DYNAMIC SELECT controller 33
 - Configuring individual drive program 33
 - Configuring using the DYNAMIC SELECT button 33
 - Displaying engine data 33
 - Setting options 33
- E**
- E-mail**
 - Calling up the settings menu 52
 - Changing the name of the e-mail account 53
 - Configuring an e-mail account 53
 - Configuring the e-mails displayed 53
 - Deactivating the e-mail function 53
 - Deleting 55
 - Displaying details 54
 - Downloading e-mails manually 53
 - Inbox 54
 - Reading 54
 - Settings 52
 - Using a phone number in the text 55
- F**
- Factory setting (reset function)** 27
 - Favorites**
 - Adding 19
 - Deleting 20
 - Displaying and calling up 19
 - Moving 19
 - Overview 18
 - Renaming 19
 - Favorites button** 25
 - Fuel consumption (Audio 20)** 29
- G**
- GARMIN® MAP PILOT** 35
 - Google™ Local Search**
 - Calling up Local Search 63
 - Entering a search position and search term 64
 - Importing a destination/route 64
 - Popular Searches 64
 - Search history 65
 - Using as the destination 64
- H**
- Harman kardon® Logic 7® surround sound system**
 - Balance/Fader 94
 - Calling up the sound menu 93
 - Equalizer 93
 - Features 93
 - Surround sound 94
- I**
- Internet**
 - Conditions for access 59
 - Selecting/setting access data 60
 - Setting up an Internet connection ... 60

L

Lights

- Activating/deactivating the exterior lighting delayed switch-off 29
- Ambient light settings (Audio 20) 28

List of access data

- New provider 61

List of mobile phone network providers

- With the selected provider 61

Locator lighting

- Switching on/off (Audio 20) 29

Lumbar support

- Adjusting (Audio 20) 30

M

Making a call

- Using speed dial 44
- Using the call lists 43
- Using the phone book 43

Message

- Selecting a program 31

Media Interface

- Mode 88
- Playback options 90
- Search 89
- Selecting a music file 89
- Switching to Media Interface 88

Media search

- By folder 82
- Category list 81
- Current tracklist 82
- General notes 81
- Keyword search 83
- Music genres 82
- Selecting by cover 82
- Starting the media search 81

Menu overview

- CD audio and MP3 mode 78

Mercedes-Benz Apps

- 66

Microphone, switching on/off

- 44

MirrorLink®

- Connecting a mobile phone 55
- Settings 56

Mobile phone

- Authorizing 40

- Connecting (Bluetooth® interface) 38
- Connecting another mobile phone 41
- Connecting via Mirror Link® 55
- De-authorizing 42
- Displaying Bluetooth® connection details 42
- Enabling for Internet access 60

MP3

- Copyright 78
- Fast forward/fast rewind 81
- Notes 77
- Safety notes 77
- Stop and playback function 80

N

Navigation

- Adjusting the volume of the navigation announcements 17
- Garmin® MAP PILOT 35
- Overview 35
- Switching to 35

Navigation announcements

- Switching off 17

O

Online and Internet functions

- Calling up the device list 62
- Destination/routes download 65
- Enabling a mobile phone for Internet access 60
- Ending the connection 63
- Establishing a connection 62
- Further Mercedes-Benz Apps 67
- Manually setting the access data of the mobile phone network provider 61
- Resetting settings 67
- Selecting the access data of the mobile phone network provider 60
- Setting up an Internet connection ... 60

P

Phone book

| | |
|--|----|
| Automatically importing contacts from the mobile phone | 48 |
| Calling up | 47 |
| Changing the display and sorting criteria for contacts | 48 |
| Deleting a contact | 48 |
| Deleting imported contacts | 50 |
| Displaying the details of an entry | 48 |
| Importing contacts | 49 |
| Receiving vCards | 50 |
| Saving a contact | 48 |
| Searching for a contact | 47 |
| Symbol overview | 47 |

Phone call

| | |
|---------------|----|
| Dialing | 43 |
|---------------|----|

Picture viewer

| | |
|----------------------------------|----|
| Changing view | 91 |
| Displaying pictures | 90 |
| Exiting the picture viewer | 91 |

R

Radio

| | |
|---|----|
| Activating/deactivating the station presets display | 69 |
| Deleting a station | 69 |
| Displaying information | 71 |
| Displaying station information | 70 |
| Displaying the artist and track | 70 |
| Overview | 68 |
| Setting the waveband | 68 |
| Sound settings (balance, bass, treble) | 70 |
| Storing stations | 69 |
| Switching on | 68 |
| Tagging music tracks (downloading/purchasing tracks from the iTunes Store®) | 70 |

Radio station

| | |
|---------------|----|
| Storing | 69 |
|---------------|----|

Rear view camera

| | |
|--|----|
| Displaying the image | 32 |
| Opening the camera cover for cleaning (Audio 20) | 32 |
| Switching on/off (Audio 20) | 32 |

| | |
|---|----|
| Receiving vCards | 50 |
| Redialing (telephone) | 43 |
| Resetting (factory settings) | 27 |

S

Safety notes

| | |
|-----------------------------|----|
| Audio CD and MP3 mode | 77 |
| Operating safety | 9 |
| Using the telephone | 37 |

Satellite radio

| | |
|------------------------------|----|
| Displaying information | 75 |
| Overview | 72 |
| Presets menu view | 74 |
| Registering | 71 |
| Switching to | 72 |

SatRadio

| | |
|-------------------------------|----|
| Channel list updates | 75 |
| Memory functions | 73 |
| Music and sports alerts | 74 |
| Notes | 71 |
| Selecting a category | 72 |
| Selecting a channel | 73 |
| Tagging music tracks | 75 |

SD memory card

| | |
|--------------------------|----|
| Ejecting | 79 |
| Inserting | 79 |
| Inserting/removing | 79 |

Seat cushion

| | |
|----------------------------|----|
| Adjusting (Audio 20) | 30 |
|----------------------------|----|

Seats

| | |
|---|----|
| Active multicontour seat (Audio 20) | 30 |
| Adjusting the lumbar support (Audio 20) | 30 |
| Balance (seat heating) | 31 |
| Massage function (Audio 20) | 30 |
| Massage programs (Audio 20) | 30 |
| Resetting settings | 31 |
| Selecting for adjustment (Audio 20) | 30 |
| Setting the driving dynamics (Audio 20) | 30 |

Selecting stations

| | |
|-------------|----|
| Radio | 69 |
|-------------|----|

Sending DTMF tones 45**Setting access data**

| | |
|---------------------------|----|
| Online and Internet | 60 |
|---------------------------|----|

| | | | |
|--|----|--|----|
| Setting the date | 24 | Calls with several participants | 45 |
| Setting the language | | Conference calls | 45 |
| Audio 20 | 25 | Connecting a mobile phone (gen- eral information) | 38 |
| Setting the night design | 21 | De-authorizing (disconnecting) a mobile phone | 42 |
| Setting the volume | | Deleting a speed dial preset | 51 |
| Telephone calls | 17 | Deleting messages | 55 |
| Settings | | Displaying Bluetooth® connection details | 42 |
| Sound settings | 92 | Downloading messages manually | 53 |
| Short message | | E-mail | 52 |
| see Text messages (SMS) | | E-mail requirements | 52 |
| Sound | | E-mail settings | 52 |
| Switching on/off | 17 | Ending an active call | 46 |
| Sound settings | | Entering a number | 43 |
| Balance/fader | 92 | Entering phone numbers | 43 |
| Calling up the sound menu | 92 | Establishing the connection from the mobile phone | 41 |
| Equalizer | 92 | Function restrictions | 38 |
| Speed dial | | Functions available during a call | 44 |
| Deleting | 51 | General notes | 37 |
| Setting up | 51 | Incoming call during an existing call | 46 |
| Station presets (radio) | | Making a call | 43 |
| Deleting marked stations | 69 | Message conditions | 52 |
| Storing stations | | Message settings | 52 |
| Radio | 69 | Operating options | 37 |
| Switching between summer time and standard time | 22 | Phone book | 46 |
| Switching on media mode | | Reading messages | 54 |
| Using the Media button | 76 | Reception and transmission vol- ume | 42 |
| Via the device list | 77 | Reconnecting a mobile phone automatically | 41 |
| Via the main function bar | 76 | Redialing | 43 |
| System settings | | Rejecting a call (Audio 20) | 43 |
| Bluetooth® | 24 | Safety notes | 37 |
| Date | 22 | Sending DTMF tones | 45 |
| Importing/exporting data | 26 | Setting up a speed dial | 51 |
| Language | 25 | Switching between calls (call wait- ing) | 45 |
| Time | 22 | Switching between mobile phones | 41 |
| Time zone | 22 | Switching the microphone on/off | 44 |
| | | Telephone menu overview | 38 |
| | | Text message conditions | 52 |
| | | Text message settings | 52 |
| | | Text messages (SMS) | 52 |
| T | | | |
| Telephone | | | |
| Accepting a call (Audio 20) | 43 | | |
| Adding a call | 44 | | |
| Adjusting the volume for calls | 17 | | |
| Apple CarPlay® | 57 | | |
| Authorizing a mobile phone (con- necting) | 40 | | |
| Call lists | 50 | | |
| Call waiting | 46 | | |

| | |
|--|----|
| Toggling | 45 |
| Using the telephone | 43 |
| Voice recognition | 46 |
| Telephone number | |
| Entering | 43 |
| Text messages (SMS) | |
| Calling the sender | 55 |
| Calling up the settings menu | 52 |
| Configuring the text messages displayed | 53 |
| Deleting | 55 |
| Displaying details | 54 |
| Downloading manually | 53 |
| Inbox | 54 |
| Reading | 54 |
| Settings | 52 |
| Using a phone number in the text | 55 |
| Time | |
| Setting | 23 |
| Setting the format | 24 |
| Setting the time | 23 |
| Setting the time manually | 23 |
| Setting the time zone | 22 |
| Setting the time/date format | 24 |
| Switching automatic time on/off | 22 |
| U | |
| USB audio mode | |
| Selecting a track | 81 |
| USB devices | |
| Connecting to the Media Inter- face | 79 |
| V | |
| Vehicle settings | |
| Calling up | 28 |
| Volume, adjusting | |
| Navigation messages | 17 |

Operating safety

Important safety notes

WARNING

If you operate integrated communication equipment in the vehicle when driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h) your vehicle covers a distance of 44 feet (approximately 14 m) per second.

WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

If you make any changes to the vehicle electronics, the general operating permit is rendered invalid.

This device complies with the following FCC regulations:

- FCC radiation exposure limits for unregulated equipment
- FCC guidelines for high-frequency exposure in Supplement C of OET Bulletin 65

This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and oper-

ated with at least 8 inches (20 cm) and more between the radiator and a person's body (excluding extremities: hands, wrists, feet and legs.)

Correct use

WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

Always observe the following when using the multimedia system:

- the safety notes in this manual
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

Using roof carriers may impair the correct functioning of a roof antenna (phone, satellite radio, GPS).

Attaching metalized retrofit film to the windshield may affect radio reception. This can have a negative impact on all other antennas (e.g. emergency call antenna) in the vehicle interior.

Protection against theft: this device is equipped with technical provisions to protect it against theft. Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.

Declarations of conformity

Vehicle components which receive and/or transmit radio waves

-  **USA only:** The wireless devices of this vehicle comply with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

i Canada only: The wireless devices of this vehicle comply with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Qualified specialist workshop

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Function restrictions

For safety reasons, some functions are restricted or unavailable while the vehicle is in motion. You will notice this, for example, because you will not be able to select certain menu items.

Data stored in the vehicle

Data recording

A wide range of electronic components in your vehicle contain data memories.

These data memories temporarily or permanently store technical information about:

- the vehicle's operating state
- events
- malfunctions

In general, this technical information documents the state of a component, a module, a system or the surroundings.

These include, for example:

- operating conditions of system components, e.g. fluid levels
- the vehicle's status messages and those of its individual components, e.g. number of wheel revolutions/speed, deceleration in movement, lateral acceleration, accelerator pedal position
- malfunctions and defects in important system components, e.g. lights, brakes
- vehicle reactions and operating conditions in special driving situations, e.g. air bag deployment, intervention of stability control systems
- ambient conditions, e.g. outside temperature

This data is of an exclusively technical nature and can be used to:

- assist in detecting and rectifying malfunctions and defects
- analyze vehicle functions, e.g. after an accident
- optimize vehicle function

The data cannot be used to trace the vehicle's movements.

When your vehicle is serviced, technical information can be read from the event data memory and malfunction data memory.

Services include, for example:

- repair services
- service processes
- warranty events
- quality assurance

The vehicle is read out by employees of the service network (including the manufacturer) using special diagnostic testers. You can obtain more information there, if required.

After a malfunction has been rectified, the information is deleted from the malfunction memory or is continually overwritten.

When operating the vehicle, situations are conceivable in which this technical data, in connection with other information (if necessary, after consultation with an authorized expert), could be traced to a person.

Examples include:

- accident reports
- damage to the vehicle
- witness statements

Further additional functions that have been contractually agreed upon with the customer allow certain vehicle data to be conveyed by the vehicle as well. The additional functions include, for example, vehicle location in case of an emergency.

Audio 20/mbrace

If the vehicle is equipped with Audio 20 or mbrace, additional data about the vehicle's operation, the use of the vehicle in certain situations, and the location of the vehicle may be compiled through Audio 20 or the mbrace system.

For additional information please refer to the Audio 20 operating instructions and/or the mbrace Terms and Conditions.

Event data recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record data that will assist in understanding how a vehicle's systems performed in certain crash or near crash-like situations, such as during air bag deployment or when hitting a road obstacle. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- how various systems in your vehicle are operating
- whether or not the driver and passenger seat belts are fastened
- how far (if at all) the driver is depressing the accelerator and/or brake pedal and
- how fast the vehicle is traveling

This data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, can combine the EDR data with the type of personal identification data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties that have the special equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC ("MBUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Supplemental Restraint System ("SRS") Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the SRS Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of February 2013, 13 states have enacted laws relating to EDRs.

Information on copyright

Information on licenses for free and Open Source software used in your vehicle and in the electronic components can be found on this website: <http://www.mercedes-benz.com/opensource>.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not

feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Overview

Components



- ① Display (▷ page 14)
- ② Control panel (▷ page 15)
- ③ Controller and buttons (▷ page 16)

The multimedia system consists of:

- the display
 - the control panel with a single CD drive (if available)
 - the controller
 - a slot for an SD card
 - two connection options via USB or Media Interface in the center console
- An iPod® is connected via USB cable.

Functions

- **HD FM radio and HD AM radio/satellite radio**

- **Media**

- Media support: audio and MP3 CD (if single drive available), two connection options for USB or via Media Interface, SD card, Bluetooth® audio

An iPod®, for example, can be connected directly to the USB via the integrated Media Interface.

- Media search

- **Sound system**

You can select the Harman Kardon® Logic7® surround sound system.

- **Navigation system**

- Navigation using SD memory card
- Realistic 3D map with textured city models

- **Communication**

- Messaging functions (text messages, e-mail)
- Mercedes-Benz Apps with Google™ Local Search, destination and route download, Facebook, Google Street View™, stock prices, news and much more
- Mercedes-Benz Mobile Website

- **Vehicle functions:**

- Vehicle settings, e.g. fuel consumption
- Ionization
- 360° camera
- Rear view camera
- Seat functions
- DYNAMIC SELECT (individual drive program)

- **Favorites button**

Fast access to favorites functions using the favorites button on the controller

Display

General notes

! Do not use the space in front of the display for storage. Objects placed here could damage the display or impair its function. Avoid any direct contact with the display surface. Pressure on the display surface may result in impairments to the display, which could be irreversible.

Wearing polarized sunglasses may impair your ability to read the display.

The display has an automatic temperature-controlled switch-off feature. The brightness is automatically reduced if the temperature is too high. The display may then temporarily switch off completely.

Overview



In the status bar at the top you will see the time and other displays, depending on the settings. Below it you will see the main display field.

The climate control status display is briefly displayed when you operate the climate control system.

The example shows playback in Media Interface mode.


Cleaning instructions

! Do not touch the display. The display has a very sensitive high-gloss surface; there is a risk of scratching. If you have to clean the screen, however, use a mild cleaning agent and a soft, lint-free cloth.

The display must be switched off and have cooled down before you start cleaning. Clean the display screen, when necessary, with a commercially available microfiber cloth and cleaning agent for TFT and LCD displays. Do not apply pressure to the display surface when cleaning it, as this could cause irreversible damage to the display. Then, dry the surface with a dry microfiber cloth.

Avoid using alcoholic thinners, gasoline or abrasive cleaning agents. These could damage the display surface.

Control panel

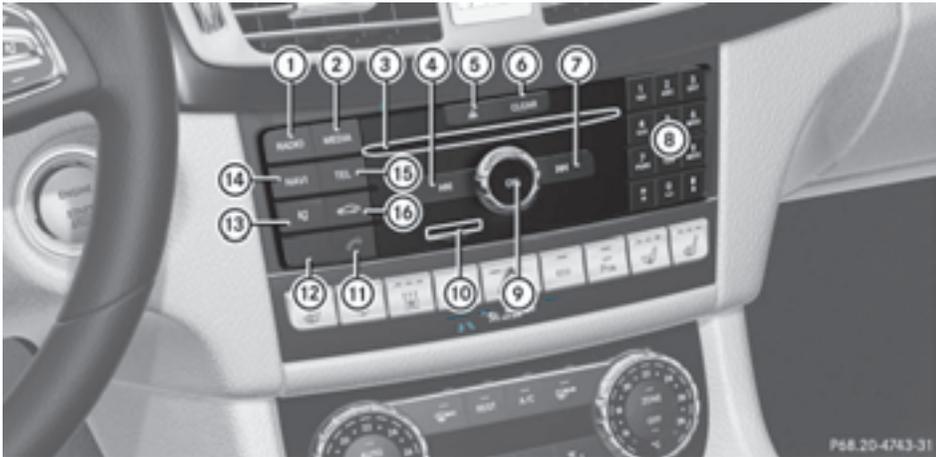

| | Function | Page | | Function | Page |
|---|--|----------|---|--|----------------------------------|
| ① | Switches to radio mode Calls up the Radio menu | 68 68 | ⑧ | Number pad <ul style="list-style-type: none"> Saves a station Authorizes (connects) a mobile phone Telephone number entry Searches for a contact ★ Selects stations by entering the frequency manually ★ Selects a track | 69 40 43 47 69 81 |
| ② | Switches to the last selected media mode Calls up the Media menu | 76 76 | ⑨ | Switches the multimedia system on/off Adjusts the volume | 17 17 |
| ③ | Inserts and removes a CD from the single drive (if single drive available) | 79 | ⑩ | Inserts or removes an SD memory card | 79 |
| ④ | Selects the previous station from the station list Skips backwards to a track | 69 81 | ⑪ | Accepts a call Makes a call Redial Accepts a new call when a call is being made (call waiting) | 43 43 43 46 |
| ⑤ | Inserts/removes a CD (if button is available) △ Single drive | 79 | ⑫ | Rejects a call Ends an active call | 43 46 |
| ⑥ | Clear button Deletes characters Deletes an entry | 16 | ⑬ | Switches the mute function on/off Switches off navigation announcements | 17 17 |
| ⑦ | Selects the next station from the station list Skips forwards to a track | 69 81 | | | |

| | Function | Page |
|---|---|----------|
| ⑭ | Switches to navigation mode (if available) Calls up the sound menu | 35 92 |

Buttons and controller

Overview



- ① Clear button
- ② Switches the display on/off
- ③ Favorites button
- ④ Back button
- ⑤ Controller

The controller may be equipped as a 4-button controller as follows:

- with the  button instead of button ② for the seat settings
- with a further favorites button instead of button ②

The controller may be equipped as a 2-button controller as follows:

- with buttons ① and ④
- with the favorites button and button ④ instead of button ①

For Mercedes-AMG vehicles: the controller is equipped with buttons ① and ④.

Controller

The controller in the center console lets you:

- select menu items on the display
- enter characters
- select a destination on the map
- save entries

| | Function | Page |
|---|-----------------------------|------|
| ⑮ | Calls up the telephone menu | 38 |
| ⑯ | Calls up vehicle settings | 28 |

The controller can be:

- turned 
- slid left or right 
- slid forwards or back 
- slid diagonally 
- pressed briefly or pressed and held 

Back button

You can use the  button to exit a menu or to call up the basic display of the current operating mode.

- ▶ **To exit the menu:** briefly press the  button.
The multimedia system changes to the next higher menu level in the current operating mode.

- ▶ **To call up the basic display:** press the  button for longer than two seconds.
The multimedia system changes to the basic display of the current operating mode.

Clear button

The delete button is on the control panel and on the controller.

- ▶ **To delete individual characters:** briefly press the  button on the control panel.
or
- ▶ Briefly press the  clear button on the controller.
- ▶ **To delete an entire entry:** press and hold the  button on the control panel.
or
- ▶ Press and hold the  clear button on the controller.

Favorites button

You can assign predefined functions using the  favorites button and call them up by pressing the button (▷ page 25).

Display off button

You can switch the display off/on using the  button (▷ page 22).

Seat button

If the controller is equipped with the  button, you can call up the menu for the seat settings (▷ page 30).

Basic functions

Switching the multimedia system on/off

- ▶ Press the  control knob. When you switch the multimedia system on, a warning message will appear. The multimedia system calls up the previously selected menu. If you switch the multimedia system off, playback of the current media source will also be switched off.

Adjusting the volume

Adjusting the volume for media sources

- ▶ Turn the  control knob.
- or
- ▶ Press the  or  button on the multifunction steering wheel. The volume of the media source currently selected changes.

Adjusting the volume for traffic announcements and navigation announcements

If your vehicle is equipped with GARMIN® MAP PILOT, you can adjust the volume of the navigation announcements.

During traffic or navigation announcements:

- ▶ Turn the  control knob.
- or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** You can set the volume for navigation announcements to be different from the volume of the respective media source.

Adjusting the volume for phone calls

You can adjust the volume for hands-free mode during a telephone call.

- ▶ Turn the  control knob.
 - or
 - ▶ Press the  or  button on the multifunction steering wheel.
- i** If your vehicle is equipped with GARMIN® MAP PILOT, you can adjust the volume of the voice control system; see the manufacturer's operating instructions.

Switching the sound on/off

Media source sound

- ▶ Press the  button on the control panel or on the multifunction steering wheel. The sound is switched off. If the audio output is switched off, the status line will show the  symbol. If you switch the media source or change the volume, the sound is automatically switched on.
- i** Even if the sound is switched off, you will still hear navigation system announcements (if available).

Switching navigation announcements off and on again

If your vehicle is equipped with GARMIN® MAP PILOT, you can switch navigation announcements on or off.

- ▶ **To switch navigation announcements off:** press the  button during an announcement. The **Spoken driving recommendations have been deactivated.** message appears.
- ▶ **To switch navigation announcements on again:** switch the multimedia system off and then on again (▷ page 17).
- or
- ▶ If navigation is available via an SD card, start a new route calculation.

Function menu



- ▶ Press the **MEDIA** button or the **NAVI**, **RADIO**, **TEL**, or **Vehicle** button.

Navigation (if available): the display last called up appears.

Radio: the basic menu of the last radio mode set appears.

Media: the basic display for the last media source set appears.

Communication: the basic menu of the last communication function set appears (telephone, Internet).

Vehicle functions: the basic display appears.

- ▶ **To show the menu:** slide **↑** or **↓** the controller. The menu for the selected functions appears. Depending on the operation, the marking is shown:
 - in the main function bar at the top or
 - in the menu bar at the bottom
- ▶ **To select a menu item:** turn and press the controller. If you have selected a menu item from the main function bar, switch to the last menu set for the selected function. The menu bar features options within the currently set function.

Selecting the operating mode for a main function

For the main functions, e.g. communication or media, you can choose from the available operating modes.

In the communication menu, you can:

- switch to telephone mode.
- access the Internet.
- call up the digital operating instructions for **Tel/Internet**.



- ▶ Press the **TEL** button. The phone menu appears.
 - ▶ **To call up the menu:** press the **TEL** button again.
- or
- ▶ To select **Tel/Internet**: slide **↑** and press the controller. The communication menu appears. **Phone** is at the front.
 - ▶ To select **Info on Phone**, for example: turn and press the controller.

Favorites

Overview of favorites



- ① Adds a new favorite (▶ page 19)
- ② Renames a selected favorite (▶ page 19)
- ③ Moves a selected favorite (▶ page 19)
- ④ Deletes a selected favorite (▶ page 20)

- ▶ **To display the favorites overview:** press the favorites button on the controller. The favorites are displayed.
- ▶ **To show the menu bar:** slide  the controller.

You can manage a total of 20 favorites.

Further information on how to select and display a favorite ([▷](#) page 19).

Displaying and selecting favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To call up a favorite:** turn and press the controller.

Adding favorites

Adding predefined favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Reassign**: turn and press the controller. The categories for the available favorites are displayed.
- ▶ **To select a category:** turn the controller and press to confirm. The corresponding favorites are displayed.
- ▶ **To select a favorite:** turn and press the controller.
- ▶ **To add a favorite at the desired position:** turn and press the controller. If there is already a favorite at this position, then this will be deleted.

Adding your own favorites

You can create your own favorites to help you to use these functions, for example:

- Calling up telephone numbers from the telephone book
- Selecting a radio station
- Skipping to a specific place in a track or an audio book
- Calling up preferred media

The example shows how to store a telephone number from the telephone book as a favorite.

- ▶ Call up the phone book.
- ▶ Search for the contact and display the phone number.
- ▶ **To add a telephone number as a favorite at the desired position:** press and hold the favorites button on the controller until the favorites are displayed.
- ▶ Turn and press the controller. If there is already a favorite at this position, then this will be deleted.

Renaming favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To select a favorite to be renamed:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Rename**: turn and press the controller.
- ▶ Enter characters using the controller.
- ▶ **To finish the entry:** select **OK**. The favorite is renamed.

Moving favorites



- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To select a favorite to be moved:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.

- ▶ To select **Move**: turn and press the controller.
- ▶ **To store a favorite in the desired order:** turn and press the controller.
The favorite is moved.
If one favorite is stored over another one, this is then is deleted.

Deleting favorites

- ▶ Press the favorites button on the controller.
The favorites are displayed.
- ▶ **To select a favorite to be deleted:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes** or **No**: turn and press the controller.
If you select **Yes** the favorite is deleted. **No** cancels the procedure.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident. Only operate this equipment when the vehicle is stationary.

WARNING

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.


Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Display settings

Setting the brightness

The brightness detected by the display light sensor affects the setting options for this function.

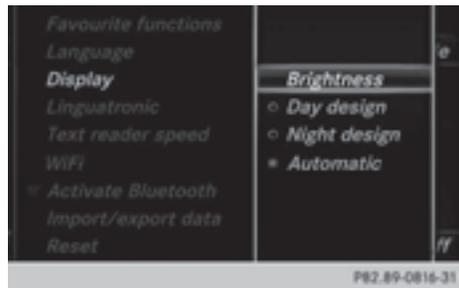

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ Select **Brightness**. A control appears.
- ▶ **To select the desired brightness**: turn and press the controller.

Display design

The display features optimized designs for day-time and night-time operation. You can set the design by manually selecting day or night design or opt for an automatic setting.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ To select **Day Mode**, **Night Mode** or **Auto**: turn and press the controller. The • dot indicates the current setting.

| Design | Explanation |
|------------|---|
| Day Mode | The display is set permanently to day design. |
| Night Mode | The display is set permanently to night design. |
| Auto | In the Auto setting, the multimedia system evaluates the readings from the automatic vehicle light sensor and automatically switches the display design. |

Switching the display on/off

- ▶ Press the  button.
- ▶ To select **Display Off**: slide , turn and press the controller. The display goes out.

or

- ▶ Press the  button on the controller. The display goes out.
- ▶ **To switch the display on again:** press the controller.

Time settings

General information

Vehicles with a GPS module: the multimedia system can automatically set the time and date.

The following navigation system functions require the time, time zone and summer/standard time to be set correctly in order to work properly:

- route guidance on routes with time-dependent traffic guidance
- calculation of expected time of arrival

Vehicles without a GPS module: you can manually set the time and date with the multimedia system.

Switching automatic time on and off

The **Automatic Time Settings** function is only available in vehicles with a GPS module.

The **Automatic Time Settings** function is used to activate or deactivate the automatic setting of the time and date. This function is activated when the vehicle leaves the factory.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
 - ▶ To select **Time**: slide , turn and press the controller. A menu appears.
 - ▶ To select **Automatic Time Settings**: press the controller.
 - ▶ To switch the function on or off : press the controller.

Setting the time zone

The **Time Zone**: function is only available in vehicles with a GPS module.

To set the time zone, the **Automatic Time Settings** function must be activated.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
 - ▶ To select **Time**: slide , turn and press the controller. A menu appears.
 - ▶ To select **Time Zone**:: turn and press the controller. A list of countries appears. The ● dot indicates the current setting.
 - ▶ Select the country you are currently in by turning and pressing the controller. The country is accepted. A time zone list may also be displayed, depending on the country selected.
 - ▶ **To select the desired time zone:** turn and press the controller. The time zone is accepted. A list of available options for setting summer time appears (▷ page 22).

Setting summer and standard time

The **Daylight Saving Time** menu is not available in all countries. The **Automatic** function is only available in vehicles with a GPS module.

You can use the **Daylight Saving Time** menu to set automatic summer time changeover or switch the summer time setting on or off. The changeover to summer time advances the time by one hour.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide , turn and press the controller. A menu appears.
- ▶ To select **Daylight Saving Time**: turn and press the controller. A list with options appears.
- ▶ To select **Automatic, On or Off**: turn and press the controller.

| Setting | Function |
|-----------|--|
| Automatic | The summer and standard time are automatically changed over. |
| On | The clock is advanced one hour ahead of standard time. |
| Off | The standard time for the chosen time zone is selected. |

Manual time setting

The **Set Time Manually** function is only available in vehicles with a GPS module.



- i** Using the manual time settings, you can set the time forwards or backwards by up to several hours.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide , turn and press the controller. A menu appears.
- ▶ To select **Set Time Manually**: turn and press the controller. A menu with an analog clock appears.
- ▶ **To set the hour**: turn the controller.
- ▶ **To highlight the minutes**: slide  the controller.
- ▶ **To set the minutes**: turn and press the controller. The time is accepted.

The **Automatic Time Settings** function is deactivated .

If **Automatic** is set for the summer time changeover, a prompt will appear asking whether the automatic changeover should be maintained between summer and winter time.

- i** If **Automatic Time Settings** is reactivated, the previous settings for time zone and summer time changeover are restored.

Setting the time

The **Set Time** function is only available in vehicles without a GPS module.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide , turn and press the controller. A menu appears.
- ▶ To select **Set Time**: press the controller. A menu appears.
- ▶ To set the hour: turn the controller.
- ▶ To highlight minutes: slide  the controller.
- ▶ To set minutes: turn and press the controller. The time is accepted.

Setting the date

The **Set Date** function is only available in vehicles without a GPS module.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide ↓, turn and press the controller. A menu appears.
- ▶ To select **Set Date**: turn and press the controller. A menu appears.
- ▶ To set the day: turn the controller.
- ▶ To highlight the month: slide → the controller.
- ▶ To set the month: turn the controller.
- ▶ To highlight the year: slide → the controller.
- ▶ To set the year: turn and press the controller. The set date is accepted.

Setting the time and date format

Use this function to set the time and date format for all displays in the vehicle.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide ↓, turn and press the controller. A menu appears.
- ▶ To select **Format**: turn and press the controller.
- ▶ **To select the desired date format**: turn and press the controller. The ● dot indicates the current setting.
- ▶ **To select the desired time format**: turn and press the controller. The ● dot indicates the current setting.

| Abbreviation | Meaning |
|----------------|--|
| DD.MM.YYYY | Day.Month.Year date format, year (all four digits) |
| DD/MM/YYYY | Day/Month/Year date format, year (all four digits) |
| MM/DD/YYYY | Month/Day/Year date format, year (all four digits) |
| YY/MM/DD | Year/Month/Day date format, year (two digits) |
| YYYY/MM/DD | Year/Month/Day date format, year (all four digits) |
| YYYY-MM-DD | Day - Month - Year date format, year (all four digits) |
| HH:MM (24 hrs) | Hours : Minutes (24 hour time format) |
| HH:MM (AM/PM) | Hours : Minutes (AM/PM time format) |

Bluetooth® settings

General information about Bluetooth®

Bluetooth®-capable devices, e.g. mobile phones, need to comply with a certain profile in order to be connected to the multimedia system. Every Bluetooth® device has its own specific Bluetooth® name.

Bluetooth® technology is a standard for short-range wireless data transmissions up to approximately 10 meters. You can use Bluetooth® to connect your mobile phone to the multimedia system, for example:

- use the hands-free system
- establish an Internet connection
- listen to music using Bluetooth® Audio
- exchange vCards

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

Activating/deactivating Bluetooth®

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide  and press the controller. A menu appears.
- ▶ To select **Activate Bluetooth**: turn and press the controller. This switches Bluetooth® on or off .

Setting the system language

This function allows you to determine the language for the menu displays and the navigation messages. The selected language affects the characters available for entry.

- i** The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.
- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To select **System Settings**: slide  and press the controller. A menu appears.
- ▶ To select **Language**: turn and press the controller. The list of languages appears. The • dot indicates the current setting.
- ▶ Select the desired language. The multimedia system loads the selected language and sets it.

Calling up the favorite functions

The favorites function can be called up as follows:

- via the **System Settings** menu
- via the Favorites button on the controller (> page 16)

Calling up the Favorites function via the system menu:

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide  and press the controller. A menu appears.
- ▶ To select **Favorite Functions**: press the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phonebook**: turn and press the controller. A menu appears.

Calling up the Favorites function using the controller:

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phonebook**: turn and press the controller.

The Favorites function can be exited at any time.

To exit the Favorites function:

- ▶ Press the Favorites button again
- or
- ▶ Press  on the controller.
- or
- ▶ To select  in the display: turn and press the controller.

Further information on the Favorites function (▷ page 18).

Importing/exporting data

General notes

! Never remove the stick or card when writing data to the USB stick or the memory card. You may otherwise lose data.


Using this function, you can do the following with your personal multimedia system data:

- transfer your personal COMAND data from one system/vehicle to another.
- make a backup copy of your personal data (export data) and load it again (import data).
- protect your data from unwanted export by activating a PIN prompt (presetting: deactivated).

You can either use an SD memory card or a USB storage device (e.g. a USB stick) as temporary storage.

Please remember that the NFTS file system is not supported. The FAT32 file system is recommended.

Activating/deactivating PIN protection

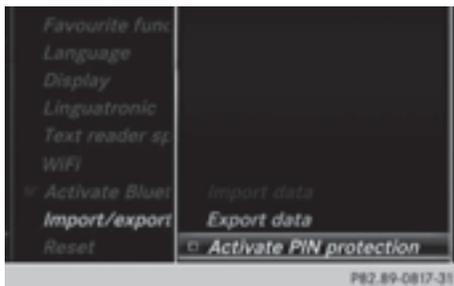

▶ Press the button.

or

▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

▶ To select **System Settings**: slide , turn and press the controller. A menu appears.

▶ To select **Data Import/Export**: turn and press the controller.

▶ Select **Activate PIN Protection**.

Activate or deactivate PIN protection. When activating PIN protection, you will be prompted to enter a PIN.



▶ To enter the 4-digit PIN and select : turn and press the controller.


You will be prompted to enter the PIN again.

▶ Enter the PIN again and select .

The PIN prompt now protects your personal data from unwanted export.

i If you deactivate your PIN protection, you will first be prompted to enter your PIN. If you have forgotten your PIN, an authorized Mercedes-Benz Center can deactivate your PIN protection for you. Alternatively, you can deactivate PIN protection by resetting your personal multimedia system data (▷ page 27).

Importing/exporting data

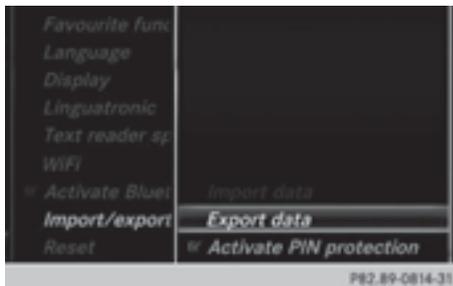

▶ Insert the SD memory card (▷ page 79).

or

▶ Connect a USB device (e.g. a USB memory stick) (▷ page 79).

- ▶ Press the  button.
- or
- ▶ Select **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide  and press the controller.
- A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Import Data** or **Export Data**.

i If you import data such as address data, the existing data on the multimedia system is overwritten. You will see a message to this effect. COMAND is restarted after the data import.



If PIN protection is activated, a PIN prompt appears when you select **Export Data**.

- ▶ To enter the PIN: turn the controller and press  . PIN protection is deactivated.
 - ▶ To select **Memory Card, USB 1** or **USB 2**: turn and press the controller. This function exports all the data to the selected disc. A window appears with the message that the data has been exported.
- i** You can export address data, bookmarks, system settings that you have made and radio station lists, for example. Mercedes-Benz is not liable for any loss of data.

Reset function

You can reset the multimedia system to the factory settings. This includes the deletion of all of your personal multimedia system data. These include:

- Station presets
- Entries in the destination memory
- Entries in the list of previous destinations in the navigation system
- Authorized telephone

In addition, an activated PIN protection, which you have used to protect your data against unwanted export, will be deactivated. Resetting is recommended before selling or transferring ownership of your vehicle, for example.

Mercedes-Benz is not liable for any loss of data.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Reset**: turn and press the controller. A prompt appears asking whether you wish to reset.
- ▶ Select **Yes** or **No**. If you select **No** the process is canceled. If you select **Yes** a prompt will appear again asking whether you really wish to reset.
- ▶ Select **Yes** or **No**. If you select **Yes** a message will be shown. The multimedia system is reset to the factory settings and restarted. If you select **No** the process is canceled.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Vehicle settings

Calling up vehicle settings

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Vehicle Settings**: turn and press the controller.
- ▶ **To select the desired vehicle setting**: turn and press the controller. The main area with the setting element is active.

Selecting a different vehicle setting:

- ▶ To activate the menu for selecting the vehicle setting: slide  the controller.

Exiting the vehicle settings:

- ▶ To select : slide  and press the controller.

Ambient lighting

General notes

You can set the following for the ambient lighting:

- Interior welcome light
Ambient lighting is activated for a short time when the driver's door is opened.
- Brightness
This setting makes an additional change to the brightness of the ambient lighting.
- Color
This setting changes the color of the ambient lighting.

Setting the brightness

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Ambient Light Brightness**: turn and press the controller. The setting element is active.
- ▶ Press the controller.
- ▶ To change the brightness value: turn and press the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Setting the color

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Ambient Light Color**: turn and press the controller. The setting element is active.
- ▶ To select a color: turn the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Setting the interior welcome light

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Interior Welcome Light**: turn and press the controller.
- ▶ Press the controller. The function is switched on or off, depending on the previous status.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Switching locator lighting on/off

If you switch on the **Locator Lighting** function, the exterior lighting is switched on for a short time when it is dark. The light switch must be set to **AUTO**.

The exterior lighting remains on for 40 seconds after the vehicle is unlocked. When you start the engine, the locator lighting is switched off and automatic headlamp mode is activated.

You can find further information on the automatic headlamp mode in the vehicle Operator's Manual.

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Locator Lighting**: turn and press the controller.
- ▶ Press the controller.
The function is switched on or off, depending on the previous status.

You can find further information on the locking feature in the vehicle Operator's Manual.

- i** There may be fewer settings or none depending on your vehicle's equipment.

Setting the delayed switch-off time

Interior lighting delayed switch-off

The interior lighting is activated for the duration of the delayed switch-off time when the Smart-Key is removed from the ignition lock.

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Interior Lighting Delayed Switch-off**: turn and press the controller.
The setting element is active.
- ▶ To change the delayed switch-off time: turn the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Exterior lighting delayed switch-off

If you switch on the **Exterior Lighting Delayed Switch-off** function, the exterior lighting is switched on for a short time after the engine is switched off. The light switch must be set to **AUTO**.

The exterior lighting remains on for 60 seconds after the engine is switched off. If you close all the doors and the tailgate, the exterior lighting switches off after the set time.

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Exterior Lighting Delayed Switch-off**: turn and press the controller.
The setting element is active.
- ▶ To change the delayed switch-off time: turn the controller.

Displaying energy consumption and generated electrical energy

A bar graph displays the energy consumption and the generated electrical energy.

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Consumption**: turn and press the controller.
The energy consumption and the generated electrical energy for the last 15 minutes of the journey is shown.

For further information on energy consumption, see the vehicle Operator's Manual.

Displaying the fuel consumption

A bar graph displays the fuel consumption.

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Consumption**: turn and press the controller.
The fuel consumption for the last 15 minutes of the journey is shown.

Switching the ionization on/off

The ionization has a cleansing effect on the air in the vehicle interior. You can find further information on the ionization in the vehicle Operator's Manual.

- ▶ Call up **Vehicle Settings** (▷ page 28).
- ▶ To select **Ionization**: turn and press the controller.
The ionization is switched on or off, depending on the previous status: press and turn the controller.

To exit a menu:

- ▶ Press the  button.

Seats

Overview

You can configure the following seat functions in the menu:

- Backrest side bolsters
- Lumbar
- Seat cushion
- Massage
- Dynamics
- Seat heating balance

i There may be fewer settings or none depending on your vehicle's equipment.

Selecting the adjustment function and seat

▶ Press the  button.

or

- ▶ To select **Vehicle** from the main function bar: turn and press the controller. The vehicle menu is displayed.
- ▶ To select **Seat Settings**: turn and press the controller. The seat settings menu is shown.

or

- ▶ Press the  button on the controller. The seat settings menu is shown.
- ▶ To select the required seat function: turn and press the controller.
- ▶ To switch between **Driver** and **Front Passenger**: slide  the controller.

Adjustment functions

Adjusting the backrest side bolsters

- ▶ Call up the seat functions (▷ page 30).
- ▶ To select **Backrest Sides**: turn and press the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.

Adjusting the seat contour in the lumbar region of the seat backrest

This function allows you to adjust the air cushions in the lumbar region of the backrest (4-way lumbar support).

- ▶ Call up the seat functions (▷ page 30).
- ▶ To select **Lumbar**: turn and press the controller.
- ▶ To activate the setting element: press the controller.
- ▶ To change the setting: slide  or  the controller. The change will be visible in the setting element.
- ▶ **To exit the menu**: press the  button.

Adjusting the seat cushion

- ▶ Call up the seat functions (▷ page 30).
- ▶ To select **Seat Surface**: turn and press the controller.
- ▶ To select a seat: slide  the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.

Adjusting the driving dynamics

- ▶ Call up the seat functions (▷ page 30).
- ▶ To select a seat: slide  the controller.
- ▶ To select **Dynamic Multicontour Seat**: turn and press the controller.

You can select:

- **0**: Off
- **1**: Level 1 (weak)
- **2**: Level 2 (strong)
- ▶ To select the setting: turn the controller.
- ▶ **To exit the menu**: press the  button.

Massage programs

Overview

You can select the following massage programs:

- **Relaxing Massage**

Massage the entire back, rising waves, soothing downward movements

- **Activating Massage**

Mobilizing massage and rising and descending dynamic waves

- **Classic Massage**

Single and twin waves moving upwards across the entire back

- **Mobilizing Massage**

Mobilization via stronger single and twin waves moving upwards across the entire back

Selecting a message program

- ▶ Call up the seat functions (▷ page 30).
- ▶ To select **Massage**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To select message programs: turn and press the controller.
The message program runs for approximately 15 to 25 minutes, depending on the setting.
- ▶ **To exit the menu**: press the  button.

Seat heating balance

The balance function controls the distribution of heat for the seat backrest and seat cushion.

The balance function influences the currently set heating level of the seat heating (see the vehicle Operator's Manual).

- ▶ Call up the seat functions (▷ page 30).
- ▶ To select **Seat Heating Balance**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To change the setting: turn the controller.
You will see the changes you have made in the settings display.

The settings represent the following:

- **0** – the backrest and seat cushion are evenly heated according to the setting selected with the seat heating button.
- **1 to 3** – the heat output to the seat cushion is reduced one level at a time.
- **-1 to -3** – the heat output to the backrest is reduced one level at a time.
- ▶ **To exit the menu**: press the  button.

Resetting all adjustments

- ▶ Call up the seat functions (▷ page 30).
- ▶ Select a seat.
- ▶ To select **Reset**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To reset: press the controller.
A prompt appears.
- ▶ To select **Yes** or **No**: turn and press the controller.
If you select **No** the process is canceled.
After selecting **Yes** all seat adjustments are reset to the default values (factory setting).

360° camera

General notes

The 360° camera surveys the vehicle surroundings and assists you, for example when parking or at exits with reduced visibility.

The 360° camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that no persons or animals are in the maneuvering range.

Further information on the 360° camera can be found in the vehicle Operator's Manual.

Displaying the 360° camera image

The 360° camera image can be displayed if:

- your vehicle is equipped with a 360° camera
- the **360° Camera** function is activated; (see the vehicle Operator's Manual)
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ Select **360° Camera**.
The 360° camera image appears in split-screen mode.

You will see the previous view on the display if, when the function is switched on:

- you turn the SmartKey to position **1** in the ignition lock
- you select transmission position **P**
- when you are driving at moderate speeds

Switching the display off manually

- ▶ To select : slide  and press the controller.

Switching the display on automatically

- ▶ You can automatically switch the 360 camera display using reverse gear (> page 32).

Switching the 360° camera automatic mode on/off

This function activates the 360° camera when reverse gear is engaged.

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ **To switch to the menu bar:** slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ To select **360° Camera**: turn and press the controller. The **360° Camera** menu appears.
- ▶ Select **Activation by R gear**. The function is switched on or off .

Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the 360° camera menu: turn the controller and press to confirm. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle exceeds a moderate speed

- i** Depending on the vehicle's equipment, this function is not available.

Rear view camera

General notes

The rear view camera covers the immediate surroundings of the vehicle and assists you when parking.

The rear view camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. When maneuvering or parking, make sure that there are no persons, animals or objects in the area in which you are maneuvering.

There may be fewer settings depending on your vehicle's equipment.

You can find further information about the rear view camera in the vehicle Operator's Manual.

Switching the rear view camera automatic mode on/off

This function activates the rear view camera when reverse gear is engaged.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **Rear View Camera**. The **Rear View Camera** menu appears.
- ▶ Select **Activation by R gear**. The function is switched on or off , depending on the previous status. When you start the vehicle and engage reverse gear, the area behind the vehicle is shown with guide lines in the display. For further information on the rear view camera (see the vehicle Operator's Manual).

Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the rear view camera menu: turn and press the controller. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle pulls away

DYNAMIC SELECT

General notes

Press **DYNAMIC SELECT** to configure the following settings and values for the Individual drive program:

- Drive system
- Suspension
- Steering
- Climate control
- ECO start/stop function

i In a few countries, the ECO start/stop function is deactivated at the factory due to the available fuel grade. In this case, the ECO start/stop function is not available regardless of the display in the multimedia system display.

For Mercedes-AMG vehicles, you can configure the following settings and adjustment values for the Individual drive program:

- Drive system
- Suspension
- Transmission
- ESP[®] (Electronic Stability Program)

There may be fewer settings or none depending on your vehicle's equipment.

For further information on the Individual drive program; see the vehicle Operator's Manual.

Configuration using the DYNAMIC SELECT button

- ▶ Use the DYNAMIC SELECT button to select the Individual drive program (see the vehicle Operator's Manual).
A window appears after a short while.
- ▶ **To confirm Adjust:** press the controller. The **Individual Configuration** menu for setting the drive program appears.
- ▶ **To select Drive, Suspension, Steering, Climate Control or Eco Start/Stop Function:** turn and press the controller.
- ▶ Select individual settings.
The menu symbol, text and image show the selected setting.

Configuration via the DYNAMIC SELECT controller

The DYNAMIC SELECT Controller is available for Mercedes-AMG vehicles.

- ▶ Use the DYNAMIC SELECT controller to select the Individual drive program (see the vehicle Operator's Manual).
A window appears after a short while.
- ▶ **To confirm Adjust:** press the controller. The **Individual Configuration** menu for setting the drive program appears.
- ▶ **To select Drive, Suspension, Transmission or ESP:** turn and press the controller.
- ▶ Select individual settings.
The menu symbol, text and image show the selected setting.

Displaying engine data

- i** There may be fewer displays depending on your vehicle's equipment.
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ **To select DYNAMIC SELECT:** turn and press the controller.
The **Individual Configuration** and **Engine Data** menus appear.
- ▶ Select **Engine Data**.
The following current data is displayed:
 - Engine output
 - Engine torque
 - Engine oil temperature
 - Transmission oil temperature (Mercedes-AMG vehicles)
 - On-board voltage

Setting options

You can choose from the following settings for the drive:

| | |
|----|---------|
| C | Comfort |
| S | Sport |
| S+ | Sport + |
| M | Manual |
| E | Eco |

You can make the following settings for the suspension:

| | |
|----|---------|
| C | Comfort |
| S | Sport |
| S+ | Sport + |

You can make the following settings for the steering:

| | |
|---|---------|
| C | Comfort |
| S | Sport |

You can choose from the following settings for climate control:

| | |
|---|---------|
| E | Eco |
| C | Comfort |

You can choose from the following settings for the ECO start/stop function:

| | |
|-----|--|
| On | Switches the ECO start/stop function on |
| Off | Switches the ECO start/stop function off |

Setting options (Mercedes-AMG vehicles)

You can choose from the following settings for the drive:

| | |
|----|---------|
| R | Race |
| C | Comfort |
| S | Sport |
| S+ | Sport + |

You can make the following settings for the suspension:

| | |
|---|---------|
| C | Comfort |
| S | Sport |

You can choose from the following settings for the transmission:

| | |
|---|-----------|
| D | Automatic |
| M | Manual |

You can choose from the following settings for the ESP® (Electronic Stability Program):

| | |
|----|---|
| S | Sport |
| On | Activates ESP® (Electronic Stability Program) |

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

GARMIN® MAP PILOT navigation module

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

When using GARMIN® MAP PILOT, please observe the legal requirements of the country in which you are currently driving.

Always observe the traffic regulations when driving. Road and traffic rules and regulations always have priority over GARMIN® MAP PILOT driving recommendations.

WARNING

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

General notes

The SD card box contains a quick guide to GARMIN® MAP PILOT. The GARMIN® MAP PILOT operating instructions are stored on the SD memory card as a PDF file.

Garmin® MAP PILOT can be operated using the controller.

SD memory card

▶ To insert the SD memory card: insert the SD memory card into the multimedia connector unit until it engages. The side with the contacts must face downwards and point towards the slot.

 Ensure that the write protection on the SD memory card is deactivated. To do this, the switch on the side must be pushed in the direction of the contacts and not the LOCK position.

▶ Follow the steps as instructed; see the vehicle Operator's Manual.

You can obtain digital map and software updates from an authorized Mercedes-Benz Center.

For some countries, digital map and software updates are available in the form of a download or an SD memory card. To access them, visit the <http://shop.mercedes-benz.com> website and follow the instructions in the section "Garmin® MAP PILOT".

Further information; see the manufacturer's operating instructions.

Switching to navigation mode

▶ Press the  button. The last navigation display used appears. Further information; see the manufacturer's operating instructions.

Adjusting the volume

During a navigation announcement:

▶ Turn the  control knob.

or

▶ Press the  or  button on the multi-function steering wheel.

i You can set the volume for navigation announcements to be different from the volume of the respective media source.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

If you make a call on your mobile phone while driving, always use hands-free mode. Only use the mobile phone when road, weather and traffic conditions permit. Some jurisdictions prohibit the driver from using a mobile phone while driving a vehicle.

Bear in mind that at a speed of 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 feet (approximately 14 m) per second.

Excessive levels of electromagnetic radiation may cause damage to your health and the health of others.

There is scientific discussion surrounding the possible health risks posed by electromagnetic fields. You can reduce this risk by using an exterior antenna.

Therefore, connect your mobile communication equipment to the vehicle's exterior antenna wherever possible.

General notes

Telephony

The Bluetooth® interface on the multimedia system is available for telephony.

If your mobile phone supports the Bluetooth® profile PBAP (Phone Book Access Profile), the contacts are automatically displayed in the multimedia system.

You can use the text message and e-mail functions if your mobile phone supports the MAP Bluetooth® profile (Message Access Profile). Observe the other requirements for the e-mail and text message functions (> page 52).

With a suitable mobile phone, you can use the hands-free system and receive vCards via the Bluetooth® interface.

You can obtain more information about suitable mobile phones on the Internet at <http://www.mercedes-benz-mobile.com>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

Call disconnection while the vehicle is in motion

A call may be disconnected if:

- there is insufficient network coverage in certain areas.
- you move from one transmitter/receiver area (cell) into another and no channels are free.
- you use a SIM card that is not compatible with the network available.

Operating options

You can operate the telephone by:

- using the controller:
 - turning
 - sliding   or  
 - pressing
- using the  or  button on the multi-function steering wheel

The Bluetooth® interface on the multimedia system is available for telephony.

Function restrictions

You may have to wait before using telephony via the multimedia system in the following situations:

- when the mobile phone is switched off
- if Bluetooth® is switched off on the mobile phone
- if the mobile phone has not logged on to a mobile phone network
- if the Bluetooth® function is switched off in the multimedia system

The telephone automatically tries to log on to a network. If no network is available, you may not be able to make a "911" emergency call. If you attempt to make an outgoing call, the **No Service** message will appear for a short while.

Telephone menu overview



- ① Mobile phone network provider
- ② Signal strength of the mobile phone network
- ③ Receiver icon  or 
- ④ Telephone menu character bar
- ⑤ Bluetooth® device name of the currently connected mobile phone
- ⑥ Displays the phone book

Symbol ② shows the current signal strength of the mobile phone network. If all bars are filled, you have optimum reception.

If no bars are shown, reception is either very poor or there is none at all.

Receiver icon shows whether a call is active/being connected  or not .

Calling up the telephone menu

- ▶ Press .

Showing the menu bar

- ▶ Slide  the controller.

If the mobile phone connected supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile), the  menu item is available. Further information on text messages and e-mail (▷ page 52).

If you have an unread text message or e-mail, the  mail symbol is displayed in the status bar. The symbol disappears once you have read the text message or e-mail. The  symbol is displayed as soon as the message memory on the connected mobile phone is full. The symbol disappears once you delete at least one message.

Connecting/disconnecting a mobile phone

Prerequisites

For telephony via the Bluetooth® interface, you require a Bluetooth®-capable mobile phone. The mobile phone must support Hands-Free Profile 1.0 or above.

On the multimedia system

- ▶ Activate Bluetooth® (▷ page 25).

On the mobile phone

- ▶ Switch on the mobile phone and enter the PIN when prompted to do so (see the manufacturer's operating instructions).
- ▶ Activate Bluetooth® and, if necessary, Bluetooth® visibility for other devices (see the manufacturer's operating instructions).
This visibility is for restricted periods of time on some mobile phones (see the manufacturer's operating instructions).
- ▶ Set the Bluetooth® device name for the mobile phone if necessary.

The device names for all of one manufacturer's products might be identical. To make it possible to clearly identify your mobile phone, change the device name (see the manufacturer's operating instructions). The name can be freely selected.

If the mobile phone supports the PBAP (Phone Book Access Profile) and MAP (Message Access Profile) Bluetooth® profiles, the following information will be transmitted after you connect:

- Phone book
- Call lists
- Text messages and e-mails

Further information on allowing or suppressing the automatic download of the phone book (▷ page 48).

The battery of the mobile phone should always be kept sufficiently charged in order to prevent malfunctions.

i Not all mobile phones available on the market are equally suitable. You can obtain more detailed information about suitable mobile phones and about the connection between the mobile phone and the multimedia system on the Internet at

<http://www.mercedes-benz-mobile.com>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEdes (1-800-367-6372). In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

i Some displays (e.g. the signal strength) depend on the supported version of the Hands-Free Profile.

Procedure and general information

Authorizing a mobile phone (connecting)

Before using your mobile phone with the multimedia system for the first time, you will need to search for the phone (▷ page 39) and then authorize it (▷ page 40). Depending on the mobile phone, authorization either takes place by means of Secure Simple Pairing or by entering a passkey. The multimedia system automatically makes the procedure that is relevant for your mobile phone available. You can recognize Secure Simple Pairing by the fact that a code is displayed on the mobile phone and on the multimedia system. You can recognize the passkey system by the fact that you have to enter a code on the mobile phone and on the multimedia sys-

tem. The mobile phone is connected automatically after authorization. Further information about automatically reconnecting authorized mobile phones (▷ page 41).

If the multimedia system does not detect your mobile phone, this may be due to particular security settings on your mobile phone. You can also start the search procedure and authorization on the mobile phone (▷ page 41).

Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be obtained from an authorized Mercedes-Benz Center or via the Internet at <http://www.mercedes-benz.com/connect>.


You can authorize up to 15 mobile phones. After authorization, the connection of the last two telephones used always functions automatically. For telephony, only one mobile phone can be connected to the multimedia system at any one time.

De-authorizing (disconnecting) a mobile phone

The connection is terminated automatically if you leave the receiver range of the multimedia system or deactivate Bluetooth® on your mobile phone.

If you no longer want the Bluetooth® connection to be established automatically, the mobile phone must be de-authorized (disconnected) (▷ page 42).

Searching for a mobile phone

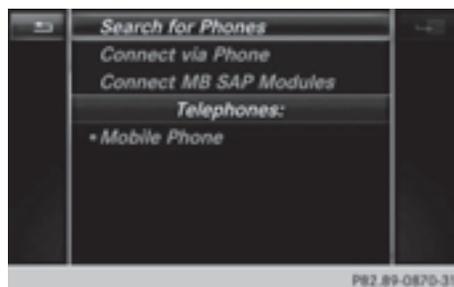

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙**↓ the controller.

- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To select **Search for Phones**: turn and press the controller.
A message is displayed that Bluetooth® must be activated on the mobile phone and must be made visible to other devices.
- ▶ To select **Start Search**: press the controller.
The available mobile phones are displayed in the device list.

The duration of the search depends on the number of Bluetooth® telephones within range and their characteristics.

If a new phone is found, it appears in the device list with the  symbol. You can now authorize (connect) the mobile phone found (▷ page 40).

If the maximum number of authorized devices in the device list is reached, you will be requested to de-authorize a mobile phone (▷ page 42).

When you call up the device list again, de-authorized devices will be removed from the list. To update the device list, start the search again.

Symbols in the device list

| Symbol | Explanation |
|---|--|
|  | New mobile phone found, not yet authorized. |
|  | Mobile phone is authorized, but is not connected |
| • | Mobile phone is authorized and connected |

Authorizing a mobile phone (connecting)

Authorization via Secure Simple Pairing

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.
A code is displayed in the multimedia system and on the mobile phone.

The code is the same

- ▶ **Multimedia system**: select **Yes**.
- ▶ **Mobile phone**: confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles separately. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 42).

The code is different

- ▶ **Multimedia system**: select **No**.
The process is canceled. Repeat the authorization.

Authorization via passkey entry (access code)

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.
The input menu for the passkey is displayed.
The passkey is a one- to sixteen-digit number combination which you can choose yourself. Depending on the mobile phone used, you may have to enter a number sequence of four digits or more.
- ▶ **Multimedia system**: enter the passkey using the character bar.
- ▶ Select  once all the numbers have been entered.
- ▶ **Mobile phone**: enter the same passkey and confirm your entry. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles separately. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 42).

If the **Authorization Failed** message appears, you may have entered a different passkey or exceeded the prescribed time limit. Repeat the procedure.

- i** If you wish to re-authorize the mobile phone after de-authorizing it, you can choose another passkey for it.
- i** Mercedes-Benz recommends de-authorization in the multimedia system as well as on the mobile phone (▷ page 42). Subsequent authorization may otherwise fail.

Establishing the connection from the mobile phone

The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ **Multimedia system:** call up the telephone menu.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To select **Connect via Phone**: turn and press the controller.
A message is displayed, stating that you can start the search on your mobile phone.
- ▶ **Mobile phone:** start the search for a Bluetooth® device (see manufacturer's operating instructions).
The multimedia system is displayed with the name **MB Bluetooth** in the mobile phone's device list.
- ▶ Select **MB Bluetooth**.
A prompt appears in the multimedia system's display asking if the mobile phone should be authorized.
- ▶ **Multimedia system:** select **Yes**.
If **No** is selected, the procedure is canceled.
If your mobile phone supports Secure Simple Pairing, a code is now displayed on both devices.

The code is the same

- ▶ **Multimedia system:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth®

profiles separately. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.
To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 42).

The code is different

- ▶ **Multimedia system:** select **No**.
The process is canceled. Repeat the procedure.

If your mobile phone does not support Secure Simple Pairing, an input menu is displayed for the passkey. The passkey is a one- to sixteen-digit number combination which you can choose yourself. Enter the same passkey in both the multimedia system and on the mobile phone and confirm. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles.

Reconnecting automatically

The multimedia system always searches for the last connected mobile phone.

If no connection can be made to the most recently connected mobile phone, the system searches for the mobile phone that was connected before that one.

Switching between mobile phones

If you have authorized more than one mobile phone, you can switch between the individual phones.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To select the desired mobile phone: turn and press the controller.
The selected mobile phone is connected if it is within Bluetooth® range and if Bluetooth® is activated.

Only one mobile phone can be connected at any one time for telephony. The currently connected mobile phone is indicated by the • dot in the device list.

- i** You can only switch to another authorized mobile phone if you are not currently making a call.

De-authorizing (disconnecting) a mobile phone

Mercedes-Benz USA, LLC recommends de-authorization in the multimedia system as well as on the mobile phone. Subsequent authorization may otherwise fail.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Conn. Device**: turn and press the controller. The device list is displayed.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **[☒]**: slide **⊙→** the controller.
- ▶ To select **Deauthorize**: turn and press the controller. A prompt appears, asking whether you really wish to de-authorize this device.
- ▶ To select **Yes**: turn and press the controller. The mobile phone is de-authorized.

or

- ▶ To select **No**: turn and press the controller. The process is canceled.

Displaying connection details

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Conn. Device**: turn and press the controller. The device list is displayed.
- ▶ To highlight the desired mobile phone: turn the controller.
- ▶ To select **[☒]**: slide **⊙→** the controller.

- ▶ To select **Details**: turn and press the controller.

The following information concerning the selected mobile phone is shown:

- Bluetooth® device name
- Bluetooth® address
- Authorization status


- ▶ **To close the detailed display**: slide **⊙→** the controller.

Setting the reception and transmission volume

Once the mobile phone has been authorized, you can optimize the transmission and reception volume settings. To find out about the best possible settings for your mobile phone, visit <http://www.mercedes-benz-mobile.com>.

You can also obtain more information by calling. In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEdes (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

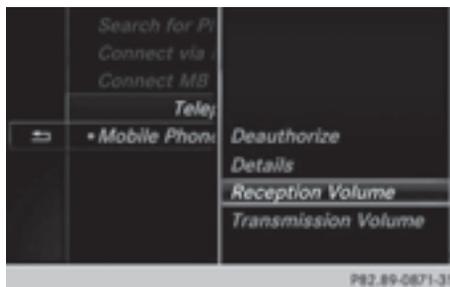

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Conn. Device**: turn and press the controller. The device list appears.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **[☒]**: slide **⊙→** the controller.
- ▶ To select **Reception Volume** or **Transmission Volume**: turn and press the controller.

- ▶ To select a volume setting: turn the controller.
- ▶ To accept changes: press the controller.

i Incorrect settings may have an impact on the quality of calls.

Using the telephone

Accepts a call

- ▶ To select  **Accept:** press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The call is accepted.

Additional functions available during a call (▷ page 44).

Adjusting the call volume (▷ page 42).

Further information about ending a call (▷ page 46).

i If the phone number of the caller is transferred, it appears in the display. If the phone number is saved in the phone book, the contact's name is also displayed. If the phone number is not transferred, **Unknown** is shown in the display.

Rejects a call

- ▶ To select  **Reject:** turn and press the controller.
or
- ▶ Press  on the multifunction steering wheel.

Makes a call

Using the telephone menu

- ▶ To call up the telephone menu: press the  button.
- ▶ To select the sequence of numbers: turn and press the controller for each number.
- ▶ To select  in the telephone menu: turn and press the controller.
The call is made.

Further information about ending a call (▷ page 46).

Using the number keypad on the upper section of the center console

- ▶ To call up the telephone menu: press the  button.
- ▶ Enter the number sequence using the number keypad.
- ▶ To select  in the telephone menu: turn and press the controller.
The call is made.

Redial

- ▶ To call up the telephone menu: press the  button.
- ▶ To select  in the telephone menu: turn and press the controller.
The list of outgoing calls is displayed. The most recently dialed number is at the top.
- ▶ To select an entry and make a call: turn and press the controller.

Further information about ending a call (▷ page 46).

Using call lists

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists:** turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed:** turn and press the controller.
The relevant list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.

Further information about ending a call (▷ page 46).

Using the phone book

- ▶ To call up the telephone menu: press the  button.
- ▶ To select **Name** in the telephone menu: turn and press the controller.
- ▶ Search for and call a contact (▷ page 47).

Further information about ending a call (▷ page 46).

Using speed dial

Option 1

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To highlight a number from the character bar: turn the controller.
- ▶ Press the controller for longer than two seconds.
The telephone menu displays the selected entry. The number is dialed.

Option 2

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⇩** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Speed Dial Preset List**: turn and press the controller.
The speed dial list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.
The telephone menu displays the selected entry. The number is dialed.

Further information on setting up speed dial (▷ page 51).

Further information about ending a call (▷ page 46).

Functions available during a call

Overview



- ① Adding a call (▷ page 44)
- ② Person you are calling
- ③ Symbol for active telephone connection
- ④ Ends a call

- ⑤ Switches the microphone on/off (▷ page 44)
- ⑥ Sends DTMF tones (not possible with all mobile phones) (▷ page 45)

Other functions:

- Accepting a waiting call (▷ page 46)
- Call waiting (▷ page 45)
- Conducting a conference call (▷ page 45)

Availability depends on the network (only possible in the GSM network) and on the Bluetooth® mobile phone.

Adding a call



① Adding a call

If the mobile phone network provider and the mobile phone support the function, you can make another call during an existing call. The previously active call is held.

- ▶ To select **☎₂**: turn and press the controller.
- ▶ To make a call, e.g.:
 - Using the telephone menu (▷ page 43)
 - Using redial (▷ page 43)
 - Using the call lists (▷ page 43)
 - Using the phone book (▷ page 43)
 - Using speed dial (▷ page 44)

Switches the microphone on or off

This function is available in the telephone menu during an active phone call.

Switching off the microphone:

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Microphone Off**: turn and press the controller.
If the microphone is switched off, the  symbol and the **The microphone is off.** message are displayed.

Switching on the microphone:

- ▶ Select **Microphone On**.
The  symbol disappears. The **The microphone is on.** message is shown.

Sending DTMF tones

This function is not supported by all mobile phones.

Answering machines or other devices can be controlled by DTMF tones, e.g. for remote query functions.

- ▶ If you would like to listen to the messages on your answering machine, for example, dial the corresponding number.

Transmitting individual characters


- ▶ Once a connection has been established to the answer phone, select the desired characters in the telephone menu: turn and press the controller each time.

or

- ▶ Press the corresponding key on the number keypad.
Every character selected will be transmitted immediately.

Calls with several participants

Switching between calls (call waiting)

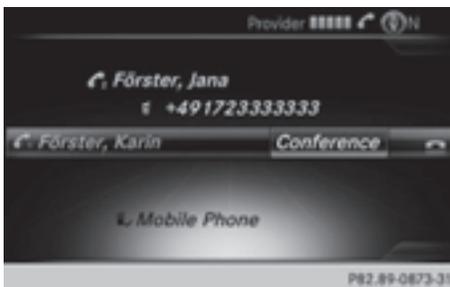

If you make another call, you can switch between the two calls (call waiting). This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

The calls are marked 1 and 2. The active call is highlighted.

Switching between the calls

- ▶ Press  on the multifunction steering wheel.
- or
- ▶ To select  or : turn and press the controller.
The selected call is active. The other call is on hold.

Ending the active call

- ▶ To select  in the telephone menu: turn and press the controller.
- or
- ▶ Press  on the multifunction steering wheel.
The other call is still on hold.
- ▶ To activate the call on hold: select  **Resume**.
The call on hold is activated. If you select  **Hang Up**, the call on hold is also ended.
- i** On some mobile phones, the call on hold is activated as soon as the active call is ended.

Conference call

This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions). You can interconnect active and held calls. This permits several parties to hear one another and speak with one another.



- ▶ Add a call (▷ page 44).
- or
- ▶ Answer an incoming call (▷ page 46).
- ▶ To select **Conference** in the telephone menu: turn and press the controller.
The new participant is included in the conference call. **Conference** is displayed in the telephone menu.

Incoming call during an existing call (call waiting)

The call waiting function depends on your mobile phone network provider and your mobile phone. Depending on the mobile phone used, behavior when answering a call may vary (see the manufacturer's operating instructions).

Call waiting: if you receive a call while already in a call, a message is shown. You also hear a tone. You can decide whether to accept or reject the call.

Accepting

- ▶ To select  **Accept:** press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The incoming call is active. Depending on the mobile phone used, the call which was previously active is put on hold or ended (see the manufacturer's operating instructions). If the call is on hold, you can switch back and forth between the two calls (call waiting) (▷ page 45).

i Depending on the mobile phone, you may also be able to accept the incoming call (call waiting) on your mobile phone. This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

Rejecting

- ▶ To select  **Reject:** turn and press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The behavior after the call is rejected depends on your mobile phone and mobile phone network provider.
Option 1: The originally active call is ended and the incoming call is accepted.

Option 2: Both calls are ended.

Ends an active call

- ▶ To select  in the telephone menu: turn and press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The active call is ended.

Mobile phone voice recognition

You can start or end voice recognition on your mobile phone with this function. Further information on the voice recognition service; see the manufacturer's operating instructions.

To start the mobile phone voice recognition:

- ▶ Connect the mobile phone to the multimedia system (▷ page 38).
- ▶ Press and hold the  button on the multifunction steering wheel for more than one second.
You can now use the mobile phone voice recognition.

To end the mobile phone voice recognition:

- ▶ Press  on the multifunction steering wheel.
The mobile phone voice recognition is stopped.

Phone book

Introduction

The phone book displays all the contacts.

The phone book of the mobile phone is automatically displayed in the multimedia system after the connection is established (default setting). You can deactivate automatic calling up (▷ page 48).

In the telephone book, you can:

- Search for contacts (▷ page 47)
- Store contacts (▷ page 48)
- Delete contacts (▷ page 48)

Further information on importing contacts (▷ page 49).

When you import or save contacts, they will be permanently saved in the multimedia system. These contacts will remain available even when you connect the multimedia system to a different mobile phone. You can view these contacts even without a mobile phone.

Calling up the phone book



- ▶ To call up the telephone menu: press the **TEL** button.
 - ▶ To select **Name** in the telephone menu: turn and press the controller.
If the phone book contains contacts, they will be displayed in alphabetical order. The character bar at the bottom of the display is active. You can now search for a contact (▷ page 47).
Further information on the symbols shown (▷ page 47).
- i** You can also call up the phone book with the multifunction steering wheel; see the separate operating instructions.

Symbol overview

| Symbol | Explanation |
|--------|--|
| | Contact stored in the multimedia system. |
| | Contact that was called up from a mobile phone |
| | Contact imported from the SD memory card or USB device |
| | Contact imported via the Bluetooth® interface |

Searching for a contact

Using the character bar



The description in the example uses the Latin character bar.

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ To select characters: turn the controller and press to confirm.
The first contact with the selected first character is highlighted in the phone book. If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different characters **A** and **O** are offered for selection.
- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To end the search: select **ok**.
The contacts in the phone book are displayed.
- ▶ To select a contact: turn and press the controller.
The contact's phone number is displayed.
- ▶ To call the contact: press the controller.

Back to the character bar

- ▶ Press the **←** button repeatedly until the character bar is displayed.

Using the number keypad on the upper section of the center console

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ For example, to enter the letter **C**: press the **2 ABC** number key briefly three times in succession.
The character appears the first time the key is pressed and shows all the available charac-

ters. It switches to the next character each time the key is pressed.

Displaying the details of a contact

- ▶ Call up the phone book (▷ page 47).
- ▶ Search for and select a contact (▷ page 47).
- ▶ To select **Details**: turn and press the controller.
The detailed view appears.

Closing the detailed display

- ▶ To select : slide  the controller.

Changing the display and sorting criteria for contacts

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Display and Sorting**: turn and press the controller.

You have the following options:

- **Last Name, First Name** (default setting)
The contacts are sorted by surname and displayed with a comma.
- **Last Name First Name**
The contacts are sorted by surname and displayed without a comma.
- **First Name Last Name**
The contacts are sorted by first name and displayed without a comma.
- ▶ To select the required option: turn and press the controller.
The contacts are sorted and displayed according to the selection.

Automatically importing contacts from the mobile phone

Depending on the mobile phone used, you can set whether the contacts should be called up automatically after the mobile phone is connected to the multimedia system.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Automatically Import Contacts from Phone**: turn and press the controller.
You can allow or deactivate the automatic download. If the function is deactivated, contacts which have already been called up will continue to be displayed.

If the function is deactivated, the contacts can be called up manually:

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Import Contacts**: turn and press the controller.
The contacts are called up.

Saving a contact

Saved contacts are indicated in the phone book by different symbols (▷ page 47).

- ▶ Call up the phone book (▷ page 47).
- ▶ Search for and highlight a contact from the mobile phone  (▷ page 47).
- ▶ To select : slide  the controller.
- ▶ To select **Save**: turn and press the controller.
The contact has now been saved. The contact is identified by the  symbol in the phone book.

i Saving the contact data in the multimedia system does not change the contacts on the mobile phone. If automatic calling-up of phone contacts is activated, the multimedia system displays the copy  with the changed data.

Deleting a name

You can delete contacts that have been saved or imported into the multimedia system.

- ▶ Call up the phone book (▷ page 47).
- ▶ Search for and highlight a contact in the phone book (▷ page 47).
- ▶ To select : slide  → the controller.
- ▶ To select **Delete**: turn and press the controller.
A prompt appears asking whether the contact should be deleted.
- ▶ To select **Yes**: turn and press the controller.
The phone number is deleted.

or

- ▶ To select **No**: turn and press the controller.
The process is canceled.

Closing the phone book

- ▶ To select  from the character bar: turn the controller and press to confirm.
- or
- ▶ Press the  button.

Importing contacts

Information and requirements

Contacts can be imported as vCards (vcf files). A vCard is an electronic business card. A memory card, USB device or a Bluetooth® connection can be used for importing.

- i** Up to 2000 entries can be imported into the phone book. A message notifies you when the maximum number is reached. In order to be able to then import new contacts, you have to delete existing contacts (▷ page 48).

| Source | Prerequisites |
|-------------|---|
| Memory card | The SD memory card is inserted. It contains importable contact details. |


| | |
|-----------------------|--|
| USB device | The USB device is inserted into the USB port. It contains importable contact details. |
| Bluetooth® connection | If the sending of vCards is supported via Bluetooth®, vCards can be received on mobile phones or netbooks, for example. Bluetooth® must be activated in the multimedia system and on the respective device (see the manufacturer's operating instructions). |

Importing from the memory card or USB device

Contacts imported from the memory card or from a USB device are identified by the  symbol.

The following conditions must be fulfilled in order to import vCards:


- vCards (vcf files) may be located in the main directory or in folders. The multimedia system allows for a targeted selection of the corresponding directories.
 - vCards must have the file extension ".vcf".
- i** The multimedia system supports vCards in versions 2.1 and 3.0.

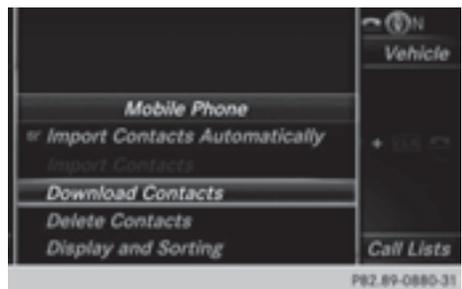

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  ↓ the controller.
- ▶ To select **Options**: turn and press the controller.

- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Memory Card, USB 1 or USB 2**: turn and press the controller.

Receiving vCards via Bluetooth®

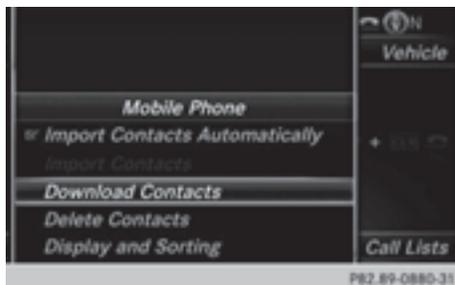

Multimedia system

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Bluetooth Device**: turn and press the controller.
If the multimedia system is connected to a mobile phone, all connections are terminated. vCards can now be received by a device (PC, mobile phone) via Bluetooth®.

External device

- ▶ Start the data transfer (see the manufacturer's operating instructions).
The number of vCards received is displayed in the multimedia system.

Multimedia system

- ▶ To end reception: press the controller or the **←** button.
If a mobile phone was connected, the connection to the mobile phone is established again.

vCards received via Bluetooth® are identified by the **BT** symbol in the phone book.

- i** If you switch to another main function, e.g. navigation, while receiving vCards, the reception of vCards will be terminated.

Deleting imported contacts

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Delete Contacts**: turn and press the controller.
- ▶ Select one of the following options:
 - **Internal Contacts**
 - **Downloaded from Phone**
 - **Imported from Storage Device**
 - **Imported from Bluetooth Devices**
 Turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The contacts are deleted.

or

- ▶ To select **No**: turn and press the controller.
The process is canceled.

- i** If automatic calling up of the contacts is deactivated (▷ page 48), the **Downloaded from Phone** option is available.

Call lists

Introduction

If your mobile phone supports the PBAP Bluetooth® profile, the call lists are displayed by the multimedia system. When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

If your mobile phone does not support the PBAP Bluetooth® profile, the multimedia system generates its own call lists. These are not the same as the call lists in your mobile phone.

The Call list option is not available unless a mobile phone is connected to the multimedia system.

- i** If you connect a different mobile phone to the multimedia system, the call lists from the new mobile phone are displayed.

Opening the call list and selecting an entry



- ① Date and time (if available)
 - ② Telephone number of the highlighted entry and symbols (if assigned)
- ▶ To call up the telephone menu: press the **TEL** button.
 - ▶ To switch to the menu bar: slide **⊙↓** the controller.
 - ▶ To select **Call Lists**: turn and press the controller.
 - ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
 - ▶ To highlight an entry: turn the controller.
 - ▶ To make a call: press the controller.

Closing the call list

- ▶ To select **⊞**: slide **←⊙** the controller.
- or
- ▶ Press the **⊞** button. The list is closed.

- i** You can also call up the list of dialed calls by pressing the **☎** button when the telephone menu is shown. In this case, the list will only show names or phone numbers.

Displaying details from a list entry

Abbreviated list entries can also be shown in full.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.

- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select **☎**: slide **⊙→** the controller.
- ▶ To select **Details**: turn and press the controller. The details are displayed.
- ▶ To go back to the list: slide **←⊙** the controller repeatedly until the list is highlighted.

Speed dial lists

Setting up

- ▶ Call up the phone book (▷ page 47).
- ▶ Search for and select a contact (▷ page 47).
- ▶ To highlight the telephone number: turn the controller.
- ▶ To select **☎**: slide **⊙→** the controller.
- ▶ To select **Assign Speed Dial Preset**: turn and press the controller. The speed dial list is displayed.
- ▶ To select a memory position for the speed dial: turn and press the controller. If you select an entry that already exists in the speed dial list, this is overwritten with the new entry. The phone number has been saved as a speed dial.

Deleting

Deleting a speed dial preset

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**. The speed dial list is displayed.
- ▶ To highlight the memory position you want to delete: turn the controller.
- ▶ To select **☎**: slide **⊙→** the controller.
- ▶ To select **Delete Speed Dial Preset**: turn and press the controller.

▶ To select **Yes**: turn and press the controller. The speed dial preset has been deleted.

or

▶ To select **No**: turn and press the controller. The process is canceled.

Deleting all speed dial presets

▶ To call up the telephone menu: press the **TEL** button.

▶ To call up the menu bar: slide **⊙↓** the controller.

▶ To select **Call Lists**: turn and press the controller.

▶ Select **Speed Dial Preset List**. The speed dial list is displayed.

▶ To select **[4x]**: slide **⊙→** the controller.

▶ To select **Delete All Speed Dial Presets**: turn and press the controller.

▶ To select **Yes**: turn and press the controller. All speed dials are deleted.

or

▶ To select **No**: turn and press the controller. The process is canceled.

Messages (text messages and e-mails)

General notes

New messages are identified by the **✉** symbol in the display of the multimedia system and an audible signal. Once you have read all the messages, the symbol is no longer displayed.

The multimedia system displays the 100 newest text messages.

The **✉** symbol is displayed when the mobile phone's message memory is full. The symbol is no longer displayed if you delete messages.

Prerequisites

To use the message functions, the connected mobile phone must support the MAP Bluetooth® profile. When connecting the mobile phone, you may have to accept the prompt for the MAP Bluetooth® profile.

With some mobile phones, some settings still have to be made after connecting to the multimedia system (see the manufacturer's operating

instructions). The messages are then displayed the next time you connect to the multimedia system.

An e-mail account must be set up on the mobile phone for the e-mail function (see the manufacturer's operating instructions).

To read e-mails in the multimedia system, the e-mail account first needs to be configured (**>** page 53).

Some mobile phones with the MAP Bluetooth® profile:

- only show new text messages.
- do not support deleting of text messages.
- do not support the e-mail function.
- do not send messages in a locked status.

Not all mobile phones available on the market are equally suitable. You can obtain further information about settings and supported functions of Bluetooth®-capable mobile phones on the Internet at

http://www.mbusa-mobile.com.


You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

Settings

Calling up the settings menu for messages

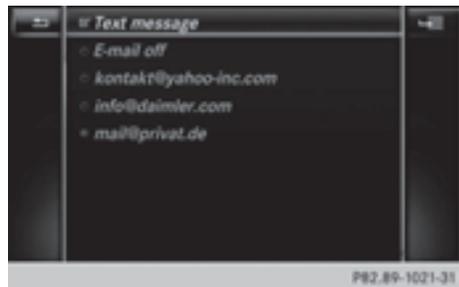

▶ To call up the telephone menu: press the **TEL** button.

▶ To switch to the menu bar: slide **⊙↓** the controller.

▶ To select **✉**: turn and press the controller. The message menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Settings**: turn and press the controller.
The text message settings and the available e-mail accounts of the connected mobile phone will be displayed.

Configuring the text messages displayed

- ▶ Call up the settings menu for messages (▷ page 52).
- ▶ To highlight **Text Message**: turn the controller.
- ▶ To select : slide  the controller.
A menu with the following options is shown:
 - **All Messages**
All the messages are displayed.
 - **New Messages**
Only the messages that are new on the mobile phone are displayed.
 - **Off**
The messages are not displayed automatically. You can display the 100 newest text messages from the mobile phone using the **Download** option in the message menu.
- ▶ To select the required option: turn and press the controller.

Configuring the e-mails displayed

- ▶ Call up the settings menu for messages (▷ page 52).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Automatic Download**: turn and press the controller.
A menu with the following options is shown:
 - **All Messages**
All the messages are displayed.
 - **New Messages**
Only the messages that are new on the mobile phone are displayed.
 - **Off**
The messages are not displayed automatically. You can display the 100 newest text

messages from the mobile phone using the **Download** option in the message menu.

- ▶ To select the required option: turn and press the controller.

Configuring an e-mail account

- ▶ Call up the settings menu for messages (▷ page 52).
- ▶ To select an e-mail account: turn and press the controller.
The e-mail account is now configured. E-mails can now be received in the multimedia system.

Deactivating the e-mail function

- ▶ Call up the settings menu for messages (▷ page 52).
- ▶ To select **E-Mail Off**: turn and press the controller.
E-mail reception is deactivated.

Changing the displayed name of the e-mail account

- ▶ Call up the settings menu for messages (▷ page 52).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Own E-Mail Address**: turn and press the controller.
The input menu for entering your own e-mail address is displayed.

Downloading messages manually

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.
The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Download**: turn and press the controller.

Downloading text messages and e-mails from the phone

- ▶ Select **From the Phone**.
The messages are downloaded. If you have selected **Automatic Download** in the e-mail settings, manual downloading is not possible.

Updating from the e-mail server by the mobile phone

- ▶ Select **From the E-Mail Server**.
The e-mails in the mobile phone are updated.
This function is not supported by all mobile phones.

Reading messages


In the message menu

The message menu contains all the unread text messages and e-mails. If the corresponding folder is called up, the messages are displayed sorted by text messages and e-mails.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed with the unread messages.
- ▶ To select the message: turn and press the controller. The message text is displayed.
- ▶ **To close the message text:** press the **☐←** button.

If you want to read messages that have already been read again, you have to call up the corresponding message folder (▷ page 54).

In the message folder

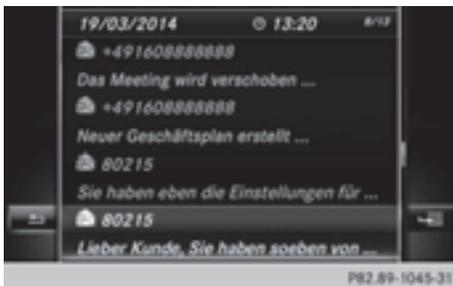

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller. The selected folder is displayed.
- ▶ To select the message: turn and press the controller. The message is displayed.
- ▶ To scroll through the message or select phone numbers in the text: turn the controller. The display scrolls up or down line by line, or skips to the next or previous telephone number and automatically highlights it.
- ▶ **To close the message text:** press the **☐←** button.

Depending on the mobile phone used, the sub-folder function may be available.

Displaying details and phone numbers

The multimedia system can also show a shortened sender display in full.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller. The selected folder is displayed.
- ▶ To highlight the desired message: turn the controller.
- ▶ To select **☐→**: slide **☉→** the controller.
- ▶ To select **Details**: turn and press the controller. The detailed view appears.
- ▶ **To close the detailed display:** slide **←☉** the controller.

Calling a text message sender

- ▶ Display the message (▷ page 54).
- ▶ To call up a menu: press the controller.
- ▶ To select **Call Sender**: turn and press the controller.
The call is made.

Using a phone number in the text

Numbers in text messages that are highlighted can be used.

- ▶ To highlight and select a usable phone number while the message is displayed: turn and press the controller.
- ▶ To select **Use**: press the controller.
- ▶ To select **Call Number**: turn and press the controller.
The call is made.

i It is possible that a highlighted numerical sequence may not contain a telephone number.

i You can use the "New entry" or "Add no." functions to save this telephone number or to add it to an existing entry.

Deleting messages

- ▶ Call up the message folder (▷ page 54).
- ▶ To select the message: turn and press the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The message is deleted in the multimedia system and from the mobile phone.

or

- ▶ To select **No**: turn and press the controller.
The process is canceled.

i This delete function is not supported by all mobile phones. The **Delete failed.** message then appears.

MirrorLink®

Introduction


MirrorLink® is a standard for the connection between the multimedia system and your mobile phone. With MirrorLink®, the content of the display on your mobile phone can be displayed in the multimedia system. Audio content from your mobile phone can also be played back in the multimedia system. The availability of MirrorLink® and MirrorLink® apps may vary according to the country. Whether buttons are supported in the vehicle depends on the mobile phone and the apps available. You will find an overview of the multimedia system's control panel and available buttons here (▷ page 13).

Prerequisites

- The mobile phone must support MirrorLink® version 1.1.
- The mobile phone is switched on
- A MirrorLink® certified app must be installed on the phone. An Internet connection is necessary for regular updates.
- The full range of functions for MirrorLink® is only possible with an Internet connection.
- The mobile phone is connected to the multimedia system via the USB port  using a suitable USB cable.
- The mobile phone must be connected to the multimedia system via Bluetooth® for the telephone functions.

The multimedia system automatically establishes a Bluetooth® connection to the mobile phone. If this is unsuccessful, an error message will appear. In this case, you should connect the mobile phone manually via Bluetooth® (▷ page 38).

Setting up a connection

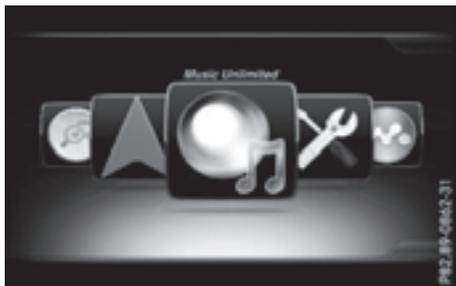

Multimedia system

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To show the main function bar: slide **↑** the controller.
- ▶ To select **Tel/** : turn and press the controller.
- ▶ To select **MirrorLink**: turn and press the controller.

Mobile phone

- ▶ Connect a mobile phone with USB cable to the USB socket in the center console.
- ▶ Activate MirrorLink® (see the manufacturer's operating instructions). Apps which have been certified for MirrorLink® are displayed in the multimedia system's display.

Exiting MirrorLink®

- ▶ Press and hold the back button.

Only one mobile phone at a time can be connected via MirrorLink® to the multimedia system.

MirrorLink® settings

Activating/deactivating automatic connection

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To show the main function bar: slide **↑** the controller.
- ▶ To select **Tel/** : turn and press the controller.

- ▶ To select **MirrorLink**: turn and press the controller.
- ▶ To switch to the menu bar: slide **⊙** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Automatically Connect MirrorLink**: turn and press the controller. You can allow or suppress the automatic connection function.

Manual activation

- ▶ **To call up the telephone menu**: press the **TEL** button.
- ▶ To display the main function bar: slide **↑** the controller.
- ▶ To select **Tel/** : turn and press the controller.
- ▶ Select **MirrorLink**.
- ▶ Connect a mobile phone with a USB cable to the USB socket in the center console.

Navigation messages on the mobile phone can also be played back

You can select whether the navigation messages should be overlaid on the multimedia system audio playback.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To show the main function bar: slide **↑** the controller.
- ▶ To select **Tel/** : turn and press the controller.
- ▶ To select **MirrorLink**: turn and press the controller.
- ▶ To switch to the menu bar: slide **⊙** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **MirrorLink Ann. Have Priority**: turn and press the controller. You can allow mobile phone navigation messages to overlay the multimedia system's audio playback or you can suppress the function .

Sound settings

If a MirrorLink® audio source is active, you can adjust the sound settings.

- ▶ To call up the telephone menu: press the  button.
- ▶ To show the main function bar: slide  the controller.
- ▶ To select **Tel/**: turn and press the controller.
- ▶ To select **MirrorLink**: turn and press the controller.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. You can adjust the sound settings.

Apple CarPlay®

Introduction

iPhone® functions can be used via the multimedia system using Apple CarPlay®. Apple CarPlay® can be operated using the controller or Siri voice-operated control system. Whether selected buttons are supported in the vehicle depends on the iOS version of the mobile phone and the apps available. You will find an overview of the multimedia system's control panel and available buttons here (▷ page 13).

To activate voice-operated control, press and hold the  button on the multifunction steering wheel (▷ page 46). Apple CarPlay® is only available for Apple mobile phones (see the manufacturer's operating instructions). The availability of Apple CarPlay® may vary according to the country.

Prerequisites

- Apple CarPlay® is available from the iPhone® 5. It is recommended that you use the latest operating system on the iPhone®.
- You will need a compatible cable for the iPhone® (Lightning cable).
- The full range of functions for Apple CarPlay® is only possible when the Apple CarPlay®-capable mobile phone is connected to the Internet.

Connecting an iPhone® to the multimedia system

In order to be able to use Apple CarPlay®, a connection must be established between the iPhone® and the multimedia system.

- ▶ Connect the iPhone® via a Lightning cable with the USB port .
- The first time you connect an Apple CarPlay®-capable mobile phone to the multimedia system or switch between Apple CarPlay®-capable mobile phones, a prompt appears asking whether you want activation, in future, to be automatic or manual.

Activating Apple CarPlay®

Automatic activation

- ▶ To select **Auto**: press the controller. Apple CarPlay® starts automatically each time after a connection is established between the iPhone® and the multimedia system.

Manual activation

- ▶ **To call up the telephone menu**: press the  button.
 - ▶ To show the main function bar: slide  the controller.
 - ▶ To select **Tel/**: turn and press the controller.
 - ▶ Select **Apple CarPlay**. Apple CarPlay® starts.
- i** Depending on the operating state, you may not have to carry out all of the operating steps. A message to start appears on the display from Apple CarPlay®. Confirm this.

Changing the activation mode

When the telephone is disconnected from the multimedia system, the activation mode can be changed.

- ▶ **To call up the telephone menu**: press the  button.
- ▶ To select **Tel/**: turn and press the controller.
- ▶ Select **Apple CarPlay**.

- ▶ To show the menu bar: slide  the controller.
- ▶ Select **Options**.
- ▶ **Start Apple CarPlay Automatically**
deactivate or activate .

Ending Apple CarPlay® mode

- ▶ Remove the USB cable from the USB port. The **No Apple CarPlay Device Connected** Please ensure that your device is connected to the correct USB port. message appears.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are driving when operating the system.

General notes

Connection difficulties while the vehicle is in motion

The connection may be lost if:

- the mobile phone network coverage is insufficient
- the vehicle has moved into a mobile phone cell with no free channels
- the SIM card used is not compatible with the network available

Function restrictions (Canada)

You will not be able to use the Mercedes-Benz Apps and Internet connection, or will no longer be able to use them, or may have to wait before using them, in the following situations:

- when the mobile phone is switched off
- if your mobile phone has not been enabled for Internet access
- if the Bluetooth® function is switched off on the multimedia system and the desired phone is to be connected via Bluetooth®
- if the Bluetooth® function is switched off on the mobile phone and the phone is to be connected via Bluetooth®
- if neither the mobile phone network nor the mobile phone allow simultaneous use of a phone and an Internet connection
- if the mobile phone has not been enabled for Internet access via Bluetooth®

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

-  It is possible that you may not be able to receive calls when an Internet connection is active. This depends on the mobile phone and the mobile phone network used.

Conditions for access

USA: to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access. Take note of the connection priorities. An emergency call has the highest priority. When a service call, e.g. a breakdown service call or the MB Info Call, is active, an emergency call can still be initiated. A service call, on the other hand, has priority over a current Internet connection. Therefore, you cannot establish an Internet connection during a service call.

Canada: a mobile phone must be connected via Bluetooth® (▷ page 38) with the multimedia system. Furthermore, you need a valid mobile service contract with a data option, which is used to calculate the associated connection costs.

Conditions for a Bluetooth® connection:

- The mobile phone supports at least one of the Bluetooth® profiles DUN (Dial-Up Networking) or PAN (Personal Area Network).

The Bluetooth® profiles DUN and PAN enable the Internet connection of the mobile phone to be made available to the system.

The terms of use are shown when the system is used for the first time and then once a year thereafter. Only read and accept the terms of use when the vehicle is stationary.

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

- ❗ The availability of individual Mercedes-Benz Apps may vary depending on the country.

Setting up an Internet connection (Canada)

Procedure and general information


USA: to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access. No further settings are required.

Canada: in order to set up a mobile phone for Internet access, your mobile phone must be connected via Bluetooth® (▷ page 38) to the multimedia system. If you are using Internet access for the first time, you must enable the connected mobile phone for Internet access (▷ page 60). If the connected mobile phone supports the Bluetooth® PAN profile, you do not need to make additional settings. The Internet connection is established. If the connected mobile phone does not support the named Bluetooth® profile, predefined (▷ page 60) or manual access data (▷ page 61) must be set.

Enabling the mobile phone for Internet access

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel**/: press the controller.

- ▶ To select **Internet**: turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller. The device list is displayed.
- ▶ To select **Search for Bluetooth Phone**: turn and press the controller. Mobile phones are displayed that:
 - fulfill the conditions for the Internet functions
 - have not yet been set up for the Internet function

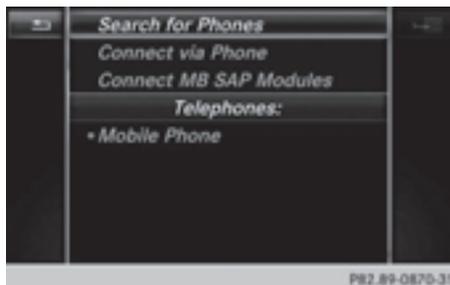

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm. If the mobile phone supports the Bluetooth® PAN profile, Internet access is set up. You can use the Internet functions. If the connected mobile phone does not support the named Bluetooth® profile, predefined (▷ page 60) or personalized access data (▷ page 61) must be set.

Setting access data of the mobile phone network provider

Selecting the predefined access data of the mobile phone network provider

- ▶ To select **Predefined Settings**: turn and press the controller. A list of countries appears.
- ▶ To select **Confirm Settings**: turn and press the controller.

If the data is not correct, you can edit the settings (▷ page 62).

If the mobile phone network provider provides multiple access data options, the relevant access data still has to be selected. This depends on the data package used, for example.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (▷ page 62).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.

Manually setting the access data of the mobile phone network provider

- ▶ To select **Manual Settings**: turn and press the controller.
An overview of the provider settings appears.
- ▶ Set access data (▷ page 61).
- ▶ To confirm settings: select **Confirm Settings** and turn and press the controller.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected.

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.

Setting access data


Set the access data in accordance with your data package. You can contact your mobile phone network provider to obtain the precise access data.

Explanation of the access data

| Input field | Meaning |
|----------------|--|
| Phone Number: | Access number for establishing the connection The access number depends on the mobile phone used. For GSM/UMTS mobile phones, *99***1# is used as a standard. |
| Access Point: | APN network access point (Access Point Name) You can obtain this information from your mobile phone network provider. Entry is not necessary for all mobile phone network providers and mobile phones. |
| PDP Type: | Internet protocol used. You can obtain this information from your mobile phone network provider. |
| User ID: | The user identification can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers. |
| Password: | The password can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers. |
| Auto DNS: | Automatic allocation of DNS servers is activated. If the function is deactivated, the DNS server addresses must be entered manually. DNS (Domain Name Service) |
| DNS1: DNS2: | Fields for entering the DNS server addresses manually. The address can be obtained from your mobile phone network provider. |


Managing existing access data

Calling up the device list

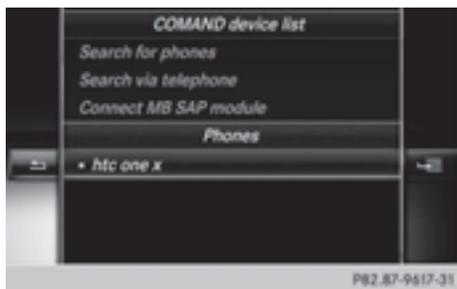

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller. The device list is displayed.

Editing the access data

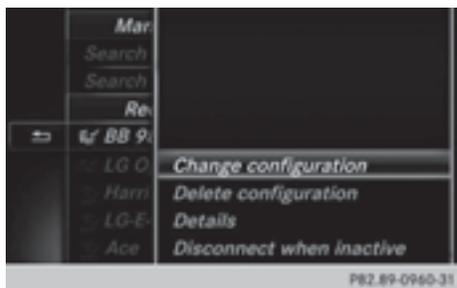

The mobile phone must be connected with the system for the access data to be changed. When the Internet connection is active, you cannot edit or delete the access data of the currently set mobile phone network provider.

- ▶ Call up the device list (▷ page 62).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **[]**: slide **⊙→** the controller.
- ▶ To select **Change Configuration**: turn and press the controller.
- ▶ Select **Predefined Settings** or **Manual Settings**. The provider settings are displayed.

In order to edit the access data of the mobile phone network provider you have two options:

- Option 1: select the predefined access data of the mobile phone network provider (▷ page 60).
- Option 2: manually set the access data of the mobile phone network provider (▷ page 61).

Canceling Internet access permissions for a mobile phone

- ▶ Call up the device list (▷ page 62).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **[]**: slide **⊙→** the controller.
- ▶ To select **Delete Configuration**: turn and press the controller. A prompt appears asking whether you wish to delete the Internet configuration.
- ▶ To select **Yes**: turn and press the controller. The Internet access permission for the mobile phone is now canceled. The mobile phone can now no longer be used by the system for Internet functions.

or

- ▶ To select **No**: turn and press the controller. The process is canceled.
- ❗ If your mobile phone is connected via the Bluetooth® profile PAN, this function is not available.

Establishing/ending the connection

Establishing the connection

Read the conditions for establishing a connection (▷ page 59).

A connection can be established by:

- calling up a Mercedes-Benz App
- calling up a Favorite.

Ending the connection

- ▶ Press **Cancel** in the connections window.

Detailed connection status

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Connection Status**: turn and press the controller.
The following information is displayed:
 - the volume of transferred data
 - connection status
 - the device name of the mobile phone
 - name of provider

Ending the connection

USA: you cannot cancel the connection yourself. The Internet connection is automatically terminated if the system does not recognize any user input within a five-minute time period.

Canada:


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **↔**: turn and press the controller.

If the mobile phone Internet connection is canceled, the multimedia system tries to reconnect.

You should therefore always end the connection in the multimedia system.

Google™ local search

Calling up Local Search

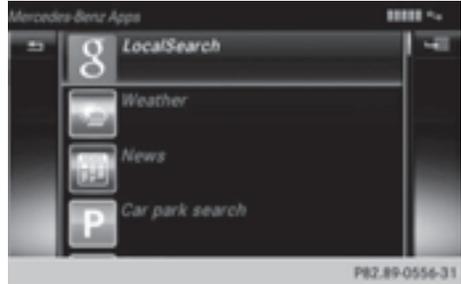


You do not need a Google™ account to use Local Search.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To select **Local Search**: turn and press the controller.

Further information on how to enter the search position and search term (▷ page 64).

- i** You will first need to register the multimedia system before you can use the Internet functions. To do so, you have to enter your name and postal address once in the vehicle and confirm the general terms and conditions.

Entering a search position and search term

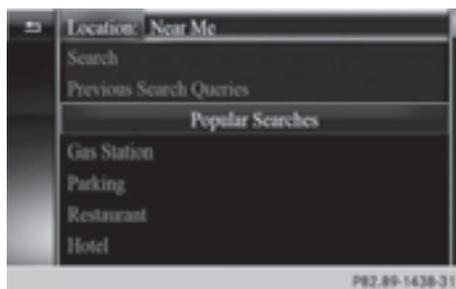

- ▶ Call up Local Search (▷ page 63).
- ▶ To enter the search position: press the controller. The following options are available:
 - **Nearby**
Searches for destinations near the current vehicle position
 - **In the Vicinity of the Destination**
You can search for destinations in the vicinity of the destination if route guidance is active.
- ▶ To select the search position: turn and press the controller.
- ▶ To select **Search**: turn and press the controller. The input menu for the search term is displayed.
- ▶ Enter characters using the controller or the number keypad.
- ▶ To complete the entry and start the search, select **OK**: turn and press the controller. The search results are displayed.
- i** Google™ determines how the search results are sorted; this is not necessarily based on the shortest distance.

Further information on how to make use of a search result (▷ page 64).

Using search results

- ▶ To select a search result: turn and press the controller. The following options are available:
 - **Details**

The address of the selected entry is displayed.

- **Set as Destination**

The navigation is called up. You can use the search result as the destination for route calculation. The search result is immediately stored in the **From Previous Destinations** memory. You can take the destination from this memory and save it permanently in the contacts.

- **Call**

The telephone menu is called up and a call is activated. If there is no phone number available, the menu item cannot be selected.

- **Google Street View**


Google Street View™ is called up. If no Google Street View™ information is available, a corresponding message appears.

- **Panoramio by Google**

You see pictures of places worth seeing in the vicinity of the search result.

- ▶ To select the option: turn and press the controller.

Popular searches

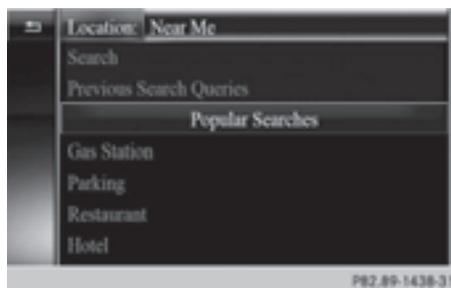

- ▶ Call up Local Search (▷ page 63).
- ▶ To select a search position, e.g. **In the Vicinity of the Destination**: turn and press the controller.
- ▶ To select search queries in the **Popular searches** section: turn and press the controller. The search results are displayed.

Search history

You can use this function if search queries have already been carried out.

- ▶ Call up Local Search (▷ page 63).
- ▶ To select the search position, e.g. **At current location**: turn and press the controller.
- ▶ To select **Search history**: turn and press the controller.
The most recent search queries are displayed.

Destination/route download

Prerequisites

To download navigation locations you need a Google™ account and your vehicle identification number. Further information about the vehicle identification number (VIN) (▷ page 66).

USA: to download navigation locations, the mbrace system must be

- activated
- operational
- activated for the services of the system and for Internet access

Procedure and general information

Sign into your Google™ account on the Internet. Use the Google Maps™ website to send the destination to a server (▷ page 65). Using the **Download POI** App, the destination is displayed in the vehicle (▷ page 65).

The destination can be:

- used for route guidance (▷ page 66)
- called up (▷ page 66)
- deleted from the server (▷ page 66).


Sending destinations to the server

- ▶ Sign into your Google™ account.
- ▶ Call up the Google Maps™ website.
- ▶ Enter a destination.
- ▶ Click "More" at the destination.
- ▶ Click "Send".

- ▶ Enter the corresponding information in the boxes shown.
- ▶ Select "Send to car".
- ▶ Select Mercedes-Benz as the vehicle brand.
- ▶ Enter the mbrace e-mail address or the vehicle identification number.
Further information about the vehicle identification number (▷ page 66).
- ▶ Click "Send".
The destination is sent to the server.

The availability of the destination/route download function is country-dependent.

Displaying destinations in the vehicle

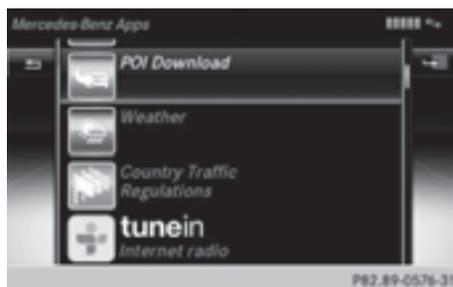

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide ↑⊙ the controller.
- ▶ To select **Tel/**🌐: press the controller.
- ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To select **Download POI**: turn and press the controller.
Available destinations are shown in the list.
- ▶ To select and download a destination: turn and press the controller.
- ▶ To exit destination download: select **Exit**.

Further information on how to use the destination for route guidance (▷ page 66).

Further information on deleting the destination (▷ page 66).

You can save up to 50 destinations for your vehicle on the server and display these in the list. If you send further destinations to the

server, the oldest entries are deleted from the list.

Using destinations

Displaying details

- ▶ Display the destination in the vehicle (▷ page 65).
- ▶ To highlight a destination: turn the controller.
- ▶ To select : slide the controller.
- ▶ To select **Details**: turn and press the controller.
The destination address is shown.

Using a destination for route guidance

- ▶ Display the destination in the vehicle (▷ page 65).
- ▶ To highlight a destination: turn the controller.
- ▶ To select : slide the controller.
- ▶ To select **Set as Destination**: turn and press the controller.
You then switch to navigation mode and can start route calculation.
The destination is entered in the list of last destinations.

Calling up the destination

You can use the function if:

- a mobile phone is connected (▷ page 38)
- the destination address contains a telephone number
- ▶ Display the destination in the vehicle (▷ page 65).
- ▶ To highlight a destination: turn the controller.
- ▶ To select : slide the controller.
- ▶ Select **Call**.
You then switch to the telephone function and make the call (▷ page 43).


Deleting a destination from the server

Destinations on the server are automatically deleted after seven days.

- ▶ Display the destination in the vehicle (▷ page 65).
- ▶ To highlight a destination: turn the controller.

- ▶ To select : slide the controller.
- ▶ Select **Delete**.
A prompt appears asking whether the destination should be deleted.
- ▶ To select **Yes**: turn and press the controller.
or
- ▶ To select **No**: turn and press the controller.
The process is canceled.

Displaying the vehicle identification number (VIN)

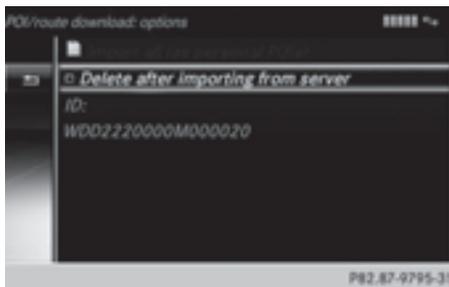

- ▶ To call up the telephone menu: press the button.
- ▶ To switch to the main function bar: slide the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To select **Download POI**: turn and press the controller.
- ▶ To select : slide the controller.
The vehicle identification number is displayed.
- ▶ **To exit the menu**: press the button.

Further Mercedes-Benz Apps

General notes

To be able to use Mercedes-Benz Apps, you first have to register. To do so, you have to enter your name and postal address once in the vehicle and confirm the general terms and conditions. A

message to this effect appears the first time you call up the online and Internet functions.

For individual Mercedes-Benz Apps, it may be necessary to pay license fees before using. Use is then limited to a certain period of time. License fees must be paid again for use beyond this time period.

Calling up Mercedes-Benz Apps

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the main function bar: slide  the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
The available **Mercedes-Benz Apps** are displayed.
- ▶ To select the desired app: turn and press the controller.

Additional Mercedes-Benz Apps can be purchased on the Mercedes-Benz website. You can find further information at:

<http://apps.mercedes-benz.com/apps/>

The available features are country-dependent.

Closing Mercedes-Benz Apps

- ▶ Press the  button.
The Internet menu appears.
- or
- ▶ Press the  button for longer than two seconds.
The Mercedes-Benz Apps menu or the Internet menu appears.

Resetting adjustments

This function resets all Mercedes-Benz Apps settings to the factory settings.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the main function bar: slide  the controller.

- ▶ To select **Tel/**: press the controller.
 - ▶ To select **Internet**: turn and press the controller.
The menu with the Internet functions is displayed.
 - ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
The available **Mercedes-Benz Apps** are displayed.
 - ▶ To select : slide  the controller.
 - ▶ To select **Reset**: turn and press the controller.
A prompt appears asking whether you really wish to reset.
 - ▶ To select **Yes**: turn and press the controller.
The settings are reset.
- or
- ▶ To select **No**: turn and press the controller.
The process is canceled.


Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Switching on the radio

- ▶ Press the **RADIO** button. The radio display appears. You will hear the last station played on the last waveband selected.

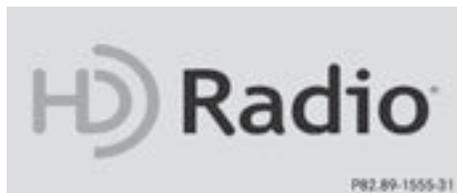

Switching HD Radio on/off

- ▶ In radio mode: slide the controller.
- ▶ Select **Options**.
- ▶ By selecting or in front of **HD Radio**, you determine whether HD radio is switched on or off.

If HD Radio is switched off, the system does not switch to digital radio and it is not possible to select any sub-channels.

- i** HD Radio™ Technology Manufactured Under License From iBiquity Digital Corp. U.S. and Foreign Patents. The HD and HD Radio logos are proprietary trademarks of iBiquity Digital Corp.

Overview



- ① Main function bar
- ② Status bar with compass display
- ③ Main display field with available stations and relevant information
- ④ Display of radio station selected
- ⑤ Radio menu bar

The following functions are available using the radio main function bar:

- **HD Radio FM**: HD FM radio mode
- **HD Radio AM**: HD MW radio mode
- **Sat Radio**: satellite radio
- **Info on Radio**: information on radio in the Digital Operator's Manual
- **Radio Station Presets**: 100 preset positions for radio stations

The following functions are available using the radio menu bar:

- **Band**: selects wavebands
- **Preset**: station presets menu
- **Information**: displays additional information about the current station (radio text or Artist Experience®)
- : sound settings, harman/kardon® Logic 7® Surround
- **Options**: radio options

Setting the waveband

- ▶ In radio mode: press the **RADIO** button. A menu appears with a selection of **HD Radio FM**, **HD Radio AM**, **Sat Radio**, **Info on Radio** and **Radio Station Presets**.
- ▶ Turn the controller until the required waveband is in the center. Press the controller.

Station

Selecting a station

From the main display field

All currently available stations are displayed.

- ▶ In radio mode, turn the controller until the desired station is in the center.

Using the current station list



- ▶ In radio mode, press the controller. The station list appears with the stations currently available.
- ▶ To select the desired station: turn and press the controller.
- ▶ **i** The • dot in front of a station indicates the currently set station.

Using frequency entry

- ▶ In radio mode: slide Ⓞ↓ the controller. The radio menu bar appears.
 - ▶ To select **Options**: turn and press the controller.
 - ▶ Select **Enter Frequency**.
 - ▶ Enter the frequency of the desired station in the entry field.
- or
- ▶ Press the **[*]** key on the number keypad. An input field appears.
 - ▶ Enter the frequency of the desired station in the entry field.

Activating/deactivating the station presets display

You can use this function to change to the station presets display.


Activating

- ▶ In radio mode: slide Ⓞ↓ the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: turn and press the controller. The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

Deactivating

- ▶ In radio mode: slide Ⓞ↓ the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller. A view of the last waveband you listened to appears.

Saving/deleting a station

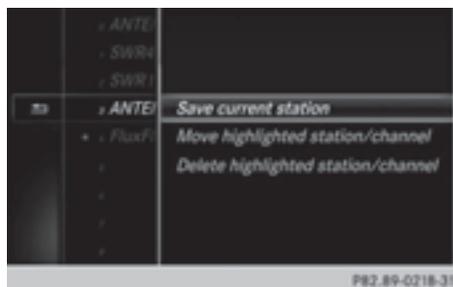

Storing current stations

- ▶ In radio mode: slide Ⓞ↓ the controller. The radio menu bar appears.
 - ▶ To select **Preset**: turn and press the controller.
 - ▶ To select the **Save Current Station/Channel** option: turn and press the controller.
 - ▶ To select the position of the required preset entry: turn and press the controller.
- or
- ▶ Select the **Edit Station Preset** option.
 - ▶ Select the position of the required preset: turn the controller.

This can also be a preset position that is already occupied, which is then overwritten by the current station.

- ▶ Slide the controller.
An additional menu appears.
- ▶ To select the **Save Current Station/Channel** option: turn and press the controller.
The currently set station is stored in the selected preset position. A tone signals a successful preset entry.

or

- ▶ Set the desired station in radio mode.
- ▶ Press and hold down the preset number to be assigned on the number keypad until a tone confirms the storing process.
- ▶ If the preset number has two digits, press the first digit briefly and then press and hold down the second digit.

or

- ▶ Set the desired station in radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.
A tone confirms that the storing process was successful.

Moving highlighted stations

- ▶ In radio mode: slide the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide the controller.
An additional menu appears.
- ▶ To select the **Move Highlighted Station/Channel** option: turn and press the controller.
The list of stored stations appears again.
- ▶ To move the highlighted station to the new position: turn the controller and press to confirm.

Deleting highlighted stations

- ▶ In radio mode: slide the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.

- ▶ Slide the controller.
- ▶ To select the **Delete Highlighted Station/Channel** option in the additional menu: turn and press the controller.

or

- ▶ Press the **CLEAR** button.
A prompt appears.
- ▶ To select **Yes**: turn and press the controller.
The highlighted station is deleted.

or

- ▶ To select **No**: press the controller.
The process is canceled.

- i** Frequencies have already been stored in the multimedia system. There are 100 preset positions available.

Tagging music tracks

This function allows you to transfer the music track currently playing to an Apple® device and then purchase it in the iTunes store®.

- ▶ In radio mode: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Tag This Track**.
A message appears in the multimedia system about storing the track information.


Displaying station information

- ▶ In radio mode: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ With or in front of **Show Station Information** you can determine whether the station name should be displayed.
If the function is active, the artist and track will also be displayed in the main display field.

Calling up sound settings

- ▶ In radio mode: slide the controller.
The radio menu bar appears.
- ▶ To select : turn and press the controller.
The sound menu appears (> page 92).

Displaying information

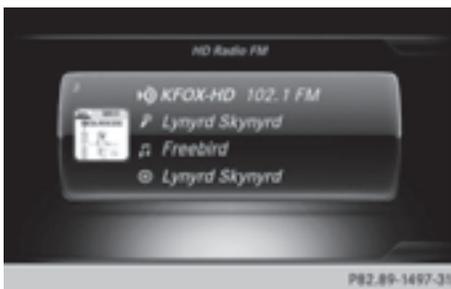

This function is available in HD FM radio and HD AM radio mode.

Reception is only possible if the radio stations provide the relevant information.

- ▶ To select **Information** in the radio menu bar: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:

- the track that is currently being played
- the artist of the track that is currently being played
- the album name
- the channel abbreviation
- the logo of the station or Artist Experience®

Back to radio display:

- ▶ To select **Information**: slide  and press the controller.

or

- ▶ Press the  button.

Satellite radio

General notes

The satellite radio mode requires satellite radio equipment and registration with a satellite radio provider.

Note that the categories and channels shown in the illustrations depend on the program content offered by the provider. The illustrations and descriptions in these operating instructions may therefore differ from the channels and categories offered by the provider.

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons.

These include environmental or topographical conditions as well as other factors beyond the control of Mercedes-Benz USA, LLC. This means operation may not be possible in certain areas. These include:

- tunnels
- parking garages
- locations inside or next to buildings
- locations in the vicinity of other structures

Sirius XM® Satellite Radio offers more than 140 digital-quality radio channels, providing 100% commercial-free music, sports, news and entertainment.

Sirius XM® Satellite Radio uses a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada.

The satellite radio program is available for a monthly fee. Details are available from the Sirius XM® Service Center and at

<http://www.siriusxm.com> (USA) or

<http://www.siriusxm.ca> (Canada).

Your new Mercedes-Benz vehicle comes with Sirius XM® Satellite Radio pre-installed at the factory. This service is free for a six-month trial period. About a month before the trial period ends, information will be provided on how to extend this subscription. An acoustic signal sounds and a message is shown, describing how the subscription can be extended.

- ① Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

Registering satellite radio



- ① Phone number of provider

- ② Sirius XM® ID of your satellite receiver

- ▶ Switch on SatRadio mode (▷ page 72). The satellite radio main menu appears showing the preview channel. You cannot select any other stations.
- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Service**: turn and press the controller. The service information screen appears.

Once the telephone connection has been established:

- ▶ Follow the instructions of the service staff. The activation process may take up to ten minutes. If the activation is completed successfully, the **Updating Channels...** message appears in the display, followed by the satellite radio main menu.

i You can also have the satellite service activated online. To do this, visit <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

i If registration is not included when purchasing the system, your credit card details will be required to activate your account.

If the satellite receiver is not installed correctly, the **Device Unavailable** message will appear.

Switching to satellite radio

- ▶ To show the main function bar: slide **↑**  the controller.
- ▶ To select **Radio**: turn and press the controller. The radio display appears. You will hear the last station played on the last waveband selected.
- ▶ To select **Radio** in radio mode: slide **↑**  and press the controller. The menu with the available radio modes appears.
- ▶ To select **Sat Radio**: turn and press the controller.

The **No Service** message appears if there is no signal.

Satellite radio overview



- ① Main function bar
- ② Preset
- ③ Channel name and channel number
- ④ Channel information
- ⑤ Station presets menu
- ⑥ Category list
- ⑦ Options menu

Selecting a category

Satellite radio channels are sorted into categories. You can choose between various categories such as News/Discussions, Sports and Country (if available). The content of the categories is sorted by channel numbers.

- ▶ **To call up the category list:** select **Category** in the menu bar by turning and pressing the controller. The category list appears.
- ▶ **To select a category:** turn the controller and press to confirm. The category selected is shown in the display. You hear the channel last selected for this category. The **•** dot indicates the current setting. When you select a specific category, the channels are filtered exclusively according to this category. Select the **All Channels** category in order to see all of the available channels. Only this category enables you to browse all available stations.

Selecting a channel

Changing channels


- ▶ When the display/selection window in the satellite radio display is selected, slide $\leftarrow \odot \rightarrow$ or turn the controller.
The multimedia system switches to the next available channel.

Entering channel numbers directly

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
The satellite radio menu appears.
 - ▶ To select **Enter Channel**: turn and press the controller.
An input menu appears.
 - ▶ Enter the desired channel in the entry field.
- or
- ▶ Press the $\boxed{*}$ key on the number keypad.
An input menu appears.
 - ▶ For the channel number, press the corresponding number keys on the control panel one after the other.
 - ▶ Press the $\boxed{\#}$ key on the number keypad.
The multimedia system sets the selected channel.

i You can only select currently permitted digits.

Selecting a channel via the satellite radio station list

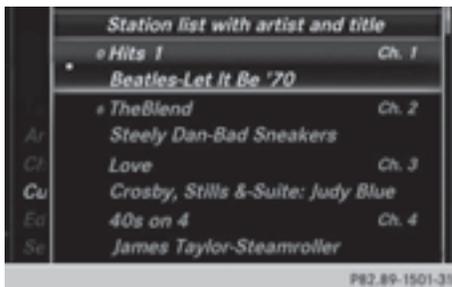

You can select the channel using the station list displaying the artists and tracks that are currently playing.

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Current Station List with Artist & Title**: turn and press the controller.
The channel list appears.

or

- ▶ Press the controller in the main display field.
- ▶ Select the desired channel

Memory functions

- i** There are 100 presets available.
- ▶ **To store a channel using the edit function:** select **Preset** in the radio menu bar by turning and pressing the controller.
- ▶ To select **Edit Station Preset**: turn and press the controller.
The list of saved channels appears.
- ▶ To select the preset: turn the controller and press for about 2 seconds.
The newly saved channel overwrites the existing preset.

or

- ▶ **To quick store:** press and hold number key 2, for example.
The channel is saved to the second position in the radio channel presets.

or

- ▶ Set the desired channel in satellite radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.
A tone confirms that the storing process was successful.

Deleting the highlighted channel

- ▶ To select **Preset** in the radio menu bar: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide $\odot \rightarrow$ the controller.
- ▶ To select the **Delete Highlighted Station/Channel** option in the additional menu: turn and press the controller.

or

- ▶ Press the **CLEAR** button.
The prompt **Do you want to delete the preset?** appears
- ▶ To select **Yes**: turn and press the controller.
The highlighted station is deleted.

or

- ▶ To select **No**: press the controller.
The process is canceled.

Activating/deactivating the station presets display

You can use this function to change to the station presets display.

Activating

- ▶ In radio mode: slide **⊙↓** the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: turn and press the controller.
The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

Deactivating

- ▶ In radio mode: slide **⊙↓** the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller.
A view of the last waveband you listened to appears.

Music and sports alerts

General notes

This function makes it possible to store a program alert for your favorite artists, tracks or sporting events.

You can store up to 30 music and sports alerts (favorites).

Music alerts can only be saved whilst a track is being played. You can also specify sports alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a saved message, you will be informed. A window appears with the respective information.

Setting a music alert

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
 - ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.
A menu appears.
 - ▶ Select **Add New Alert**.
A window with a prompt appears.
 - ▶ Select **Artist** or **Track**.
The alert is set for the current artist or track.
- i** If an alert cannot be set, the **No Alerts Available** message appears.

Setting a sports alert

- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.
A menu appears.
- ▶ Select **Manage Sports Alerts**.
A menu appears.
- ▶ Select **Select New Alerts**.
A menu appears.
- ▶ Select the desired team from a league, e.g. college, NBA, NHL, NFL or MLB.
The alert function for the sports team is added.

A window with music and sport alerts appears

- ▶ To select **Change To** or **Ignore**: turn and press the controller.
If you select **Change To**, the channel is changed and the favorite artist or track is played.
If you select **Ignore**, the current channel will continue playing.

Editing music and sports alerts

- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.
A menu appears.
- ▶ Select **Manage Music Alerts** or **Manage Sports Alerts**.
A list of set alerts appears.

Switching music and sport alerts on/off


- ▶ With or in front of **Activate Music Alerts** you can determine whether music alerts should be switched on or off.
- ▶ With or in front of **Activate Sports Alerts** you can determine whether sport alerts should be switched on or off.

Tagging music tracks

If the channel supports this function, you are able to transfer the music track currently playing to an Apple® device. You can then purchase it in the iTunes® store.

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Tag This Track**: turn and press the controller.
A message about saving this music track on the Apple® device appears.

Displaying information

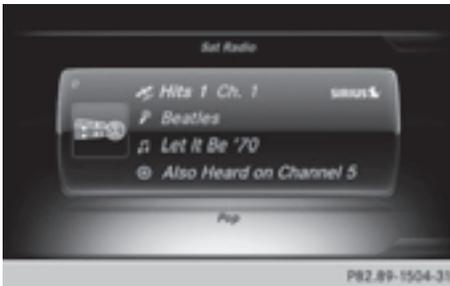

- ▶ To select **Info** in the radio menu bar: turn and press the controller.
Information on the currently received program is displayed.

If available, you will see:

- the channel logo
 - the channel abbreviation
 - the artist of the track that is currently being played
 - the track that is currently being played
 - category
 - composer
- ▶ **To return to the radio display**: select **Info** by sliding  and pressing the controller.

Displaying service information

The provider's customer service center is available by phone at any time to answer any general questions or questions on the versions available.

- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ To select **Service**: turn and press the controller.
The Sirius XM® ID of your satellite receiver and the telephone number of the provider appear.

- ▶ **To return to the main display**: press the  button.

Channel list updates

During reception of a new channel list, the **Updating Channels...** message is shown. The channel last selected is switched to mute until the update has been completed. Satellite radio mode is not available during this process. Once the update has been completed, the satellite radio basic menu appears. The channel previously selected will be played if it is still available.

Sound settings

Information on sound settings (> page 92).

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Activating media mode

General notes

There are several ways to activate media sources using the multimedia system.

The relevant sections of the Operator's Manual describe the simplest way to activate a media source.

This section describes all options for activating media sources.

Button activation

- ▶ Press the **MEDIA** button.
The last media source you have set is displayed.
- ▶ Press the **MEDIA** button again.
The menu appears with the available media sources.
- ▶ To select media sources: turn the controller until the desired media source is in the center. Press the controller.

Depending on the vehicle equipment, the following media sources will be available:

- **Disc**
- **Memory Card**
- **Media Interface 1**
- **Media Interface 2**
- **Bluetooth Audio**

If playable music files are found, they will be played by the multimedia system.

Switching on automatically

When an external media source is connected, CD and SD memory card functions are automatically switched on by the multimedia system. When using with USB devices, switch to the respective basic display.

External media sources:

- Apple® devices (e.g. iPhone®)
- USB devices (e.g. USB stick, MP3 player)
- CD
- SD cards
- devices connected via Bluetooth®

If playable music files are found, they will be played by the multimedia system.


- i** If a media function is already switched on in the multimedia system, this will be interrupted and the basic display of the newly connected device will appear (except when using with USB/iPod®). If another function, such as navigation, is being operated, the basic display will not change.

Using the main function bar



- ▶ To display the main function bar: slide **↑** (⊙) the controller.
- ▶ To select **Media**: turn and press the controller. The last media source you have set is displayed.
- ▶ To select **Media** in media mode: slide **↑** (⊙) and press the controller. The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm. If the media source contains music files, these will be played. The corresponding basic menu will be shown.

Using the device list

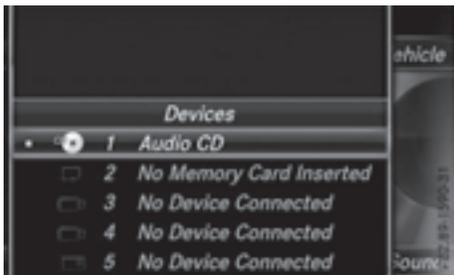

- ▶ In Media mode, slide the controller. The media menu bar appears.
- ▶ To select **Devices**: turn and press the controller. The available media sources will be shown. The dot indicates the current setting.
- ▶ Select the media source. If the media source contains music files, these will be played. The corresponding basic menu will be shown.

Audio mode

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

WARNING

Handling discs while driving may distract you from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Handle discs only when the vehicle is stationary.

Notes on audio mode

Permissible data carriers

- CD audio, CD-R and CD-RW
- SD memory card
- USB storage device
- Apple® devices

Permissible file systems

- ISO 9660/Joliet standard for CDs
- FAT16, FAT32, exFAT and NTFS for SD memory card and USB storage media
- HFS and HFS+ for Apple® devices

- Writing access is not possible on NTFS.

Multisession CDs

For multisession CDs, the content of the first session determines how the multimedia system processes the CD. The multimedia system only plays back one session and gives priority to the first session on the CD.

File structure of a data carrier

When you create a disc with compressed music files, the tracks can be organized in folders. A folder may also contain subfolders. The disc may contain no more than eight directory levels (a root and seven sub-levels). Files beyond the eighth level will not be recognized by the system.

- The multimedia system supports up to 15,000 files for all of the connected sources.

Track and file names

When you create a disc with compressed music files, you can assign names to the tracks and folders.

You should observe the following when assigning track names:

- track names must have at least one character.
- track names must have an extension of a supported audio format, e.g. mp3 or aac.
- there must be a dot between the track name and the extension.

Example of a correct track name:
"Track 1.mp3".

Permissible formats

The multimedia system supports the following audio formats:

- MP3
- WMA
- CD-A
- AAC formats: .aac, .mp4, .m4a and .m4b

Copy-protected iTunes® music files with the .m4p file extension are not supported.

Permissible bit and sampling rates

The multimedia system supports MP3 files of the following type:

- fixed and variable bit rates from 32 kbit/s to 320 kbit/s
- sampling rates of 8 kHz to 48 kHz

The multimedia system supports WMA files of the following type:

- fixed bit rates from 5 kbit/s to 384 kbit/s
- sampling rates of 8 kHz to 48 kHz

The multimedia system does not support WMA files of the following type:

- DRM (Digital Rights Management) encrypted files
- variable bit rate
- WMA Pro
- 5.1 surround sound

- ❗ Only use tracks with a bit rate of at least 128 kbit/s and a sampling rate of at least 44.1 kHz. Lower rates can cause a noticeable deterioration in quality. This is especially the case if you have activated a surround sound function.

Selecting an active partition (USB mass storage devices only)

You can select this function for USB storage devices when the storage device is partitioned. Up to 9 partitions (primary or logical, FAT, FAT32, exFAT and NTFS) are supported.

Selecting an active partition

- ▶ To select **Options** in the media menu bar: turn and press the controller.
- ▶ Select **Select Active Partition**.

Notes on copyright

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection.

In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder.

Make sure that you know about the applicable copyright regulations and that you comply with these.

Notes on compact discs

- ❗ Do not affix stickers or labels to the discs. They could peel off and damage the drive.

The drive is designed to receive EN 60908 standard discs. Therefore, you can only use discs with a maximum thickness of 1.3 mm.

If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage the drive.

Do not use discs with an 8 cm diameter, even when using an adapter. Only use round discs with a 12 cm diameter.

Discs with copy protection are not compatible with the audio CD standard and therefore may not be able to be played.

Playback problems may occur when playing copied discs.

There may be playback problems if you play CDs that you have copied yourself with a storage capacity of more than 700 MB.

Menu overview



CD mode basic display

- ① Main function bar
- ② Display for the active data medium

- ③ Media menu bar
- ④ Title display in the media list
- ⑤ Current track and number in the track list
- ⑥ Numerical time display
- ⑦ Graphic time display
- ⑧ Album cover (if available)

Inserting and removing a CD from the single CD drive

- ▶ **To insert:** press the  button on the single drive.
If there is a disc already inserted, it will be ejected.
- ▶ Insert a disc into the disc slot with the printed side facing upwards.
The drive closes and the disc is played.
If the CD is operated in Media mode, the corresponding basic menu will be shown. If the CD is started using another application (e.g. navigation) the display will not change.
- ❗ The drive may not be able to play discs with copy protection.
- ▶ **To remove:** press the  button.
The drive ejects the disc.
- ▶ Remove the ejected disc from the slot.
If you do not take the disc out of the slot, it is drawn in again automatically after a short while.

Inserting/removing an SD memory card

Important safety notes

WARNING

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

- ❗ If you are no longer using the SD memory card, you should remove it and take it out of the vehicle. High temperatures can damage the card.

The multimedia system supports SD memory cards (**Secure Digital**), SDHC memory cards (**Secure Digital High Capacity**) and SDXC memory cards (**Secure Digital eXtended Capacity**).

Inserting an SD memory card

- ▶ Insert the SD memory card into the slot on the control panel until it engages in place. The side with the contacts must face downwards. The music is played while the files are loaded in the background. If there are no supported audio files, you will see a message to this effect.
- ❗ If the SD memory card for navigation is inserted into the SD card slot, you can still select the memory card as a media source. The **No Playable Files** message then appears.

Ejecting an SD memory card


- ▶ Press the memory card.
The memory card is ejected.
- ▶ Remove the memory card.

Connecting USB devices

There are two USB ports in the stowage space under the armrest.

- ▶ Connect the USB device with a suitable USB port.
If the corresponding media display is visible, the medium is played and the files are loaded in the background. Otherwise, the system does not automatically switch to USB. If there are no supported audio files, you will see a message to this effect.
- ❗ MP3 players must support Media Transfer Protocol (MTP).

Playback options

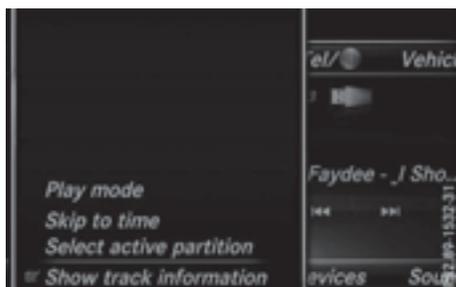

- ▶ In media mode, slide the controller. The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.

Playing similar tracks (Apple® devices)

- ▶ To select **Play More Like This**: turn and press the controller.

Play mode

- ▶ To select **Playback Mode**: turn and press the controller.
- ▶ Select **Normal Track Sequence**.

The current track list is played in the order it appears on the data medium.

- ▶ Select **Random Track List**.
The current track list is played in random order.
- ▶ Select **Random Medium**.
All tracks on the data medium are played in random order.

Skip to time

- ▶ To select **Skip to Time**: turn and press the controller.
A menu appears.
- ▶ To set the time: turn the controller or
- ▶ Set the desired time using the number keypad.


Selecting an active partition

- ▶ To select **Select Active Partition**: turn and press the controller.
With the **Select Active Partition** option, you can select a partition in the current USB data medium.

Showing track information

Ticking or removing the tick from the box in front of **Show Track Information** displays or hides the information on the track, artist and album in the main display field. If it is deactivated, the file name and the folder name of the track are displayed.

Direct track entry

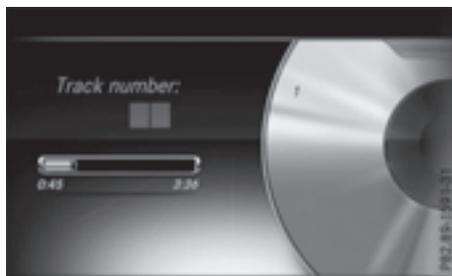

- ▶ **To enter the track number**: press the button.
A menu appears.
- ▶ Use the number keypad to enter the desired track number.
The track is played.

Pause and playback function

- ▶ **To pause playback**: in audio mode, slide the controller.
The media menu bar is shown.
- ▶ To activate in the Media menu bar: turn and press the controller.
Playback is interrupted here. The display changes to .
- ▶ **To continue playback**: in audio mode, slide the controller.
The media menu bar is shown.
- ▶ To activate in the Media menu bar: turn and press the controller.
Playback is continued from the point of interruption. The symbol changes to .

Selecting a track

Selecting using the current track list

- ▶ **To display the current track list:** press the controller in the basic display. The category list appears. Select the current track list.
- ▶ To select a track: turn the controller and press to confirm.

Selecting by skipping to a track


- ▶ To skip forwards or backwards to a track: turn or briefly slide $\leftarrow \odot \rightarrow$ the controller in the media basic display.
- or
- ▶ Press the \lll or \ggg button.

Fast forwarding/rewinding

- ▶ In the media basic display, press and hold the \lll or \ggg button until the desired position is reached.

Search

- ▶ In Media mode, slide $\odot \downarrow$ the controller. The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller. The category list is shown.
- ▶ Select a category, e.g. **Genres**. After the category has been chosen, sub-categories appear depending on the available music tracks.

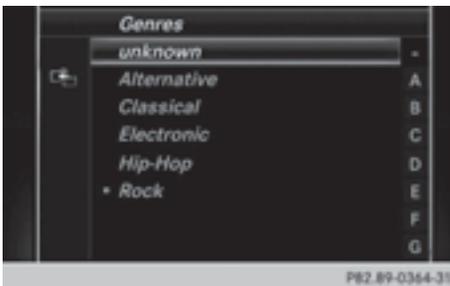

- ▶ Select a sub-category, e.g. **Rock**.
- ▶ Select a track in the sub-category for playing. All of the tracks in this sub-category are played.

Media search

General notes

The multimedia system plays back files from the following data media:

- Disc (audio CD)
- Memory card
- USB storage device
- Apple® devices (folder, year and photos are not available)

The categories are shown according to the data available, whereby a database is created for iPod® and for all the other media sources (CD, USB, SD card) respectively. During the search the relevant database is accessed depending on the active media source.

Starting the media search

- ▶ In Media mode, slide $\odot \downarrow$ the controller. The media menu bar appears.
- ▶ To select **Search**: turn and press the controller. The category list appears.

Category list

- ▶ In Media mode, slide $\odot \downarrow$ the controller. The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller. The category list is shown.

Depending on the connected media sources and files, the following categories are listed:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**

- Tracks
- Genres
- Year
- Composers
- Photos

i The categories are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these categories are available more quickly.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

Searching by current track list



- ▶ To select **Current Tracklist** in the category list: turn and press the controller. The selection list appears.
- ▶ Select the required track.

Searching by folder

Playable files can be searched for in the active data medium's directories.

- ▶ To select **Folder** in the category list: turn and press the controller. The folder list appears.
- ▶ Select the required folder. Either the desired track list appears or continue searching in the folder directory until the desired track list has been found.
- ▶ Select the required track.


Selecting by cover



- ▶ To select **Select By Cover** in the category list: turn and press the controller. A menu with cover views appears.
- ▶ Select the required cover. The track list appears.
- ▶ Select the required track.

i There is a database for iPod® and for each of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.

Searching by genre

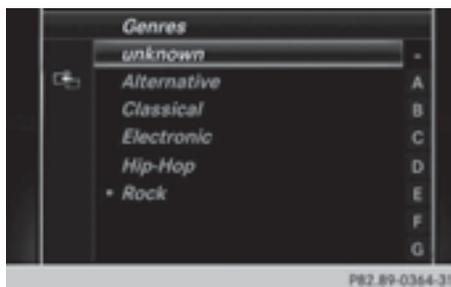


- ▶ To select **Genres** in the category list: turn and press the controller. The multimedia system searches in all media sources. A selection list with **Genres** and media sources appears.
- ▶ Select the desired **Genres**. A selection list with music tracks from the selected genre appears.
- ▶ Select a music track. The track is played. The basic menu for the active media source is shown.
- ▶ To exit the selection list: press the  button.

- i** The list is closed automatically once a selection has been made.

Keyword search



- ▶ To select **Keyword Search** in the category list: turn and press the controller. The input field appears.
- ▶ To select the desired characters: turn and press the controller for each one. Entering just part of the name of a track or artist is enough. The search result then displays the entire text.

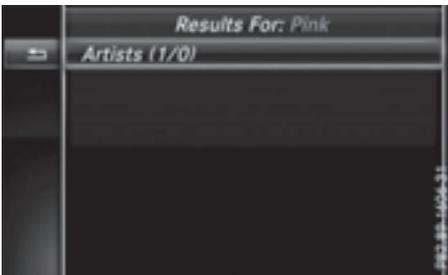

- ▶ Select **ok** . The search results are displayed. The numbers behind the results, as shown in the example **Artists (1/0)** mean: 1 result that contains the exact keyword searched for and 0 results are similar.
- ▶ Select one of the results. Keywords that have already been searched for are displayed in the "Search history" without having to enter them completely. They can be accepted directly and displayed in the search result.
- ▶ Select one entry, e.g. **Artists**. The tracks are listed.
- i** If available, the album list and covers are shown.

- i** There is a database for iPod® and for each of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.



- ▶ Select a track. The basic display appears and playback starts.

Bluetooth® audio mode

Connecting Bluetooth® audio devices

Prerequisites

- ▶ The Bluetooth® function must be activated in the multimedia system (▷ page 25).

Bluetooth® audio mode requires a Bluetooth®-capable audio device.

Check your Bluetooth® audio device for the following (see the manufacturer's operating instructions):

- Bluetooth® audio profile
The Bluetooth® audio device must support the A2DP and AVRCP Bluetooth® audio profiles.
- Bluetooth® visibility
Certain Bluetooth® audio devices do not just require activation of the Bluetooth® function. In addition, your device must be made "visible" to other devices.
- Bluetooth® device name
This device name is predetermined but can usually be changed. To make a clear selection of the Bluetooth® device possible, we recommend that you customize the device name.

i A2DP (Advanced Audio Distribution Profile): Bluetooth® audio profile for audio data transmission

AVRCP (Audio Video Remote Control Profile): Bluetooth® audio profile for audio data playback.

i The Bluetooth® device must be visible for authorization. After authorization, the multimedia system even finds the Bluetooth® device when it is not visible.

General notes

Before using your Bluetooth® audio device with the multimedia system for the first time, you will need to authorize it.

When you authorize a new Bluetooth® audio device, it is connected automatically. Connection involves first searching for a Bluetooth® audio device and then authorizing it.

You can authorize up to fifteen Bluetooth® devices.

i If you authorize a mobile phone that supports Bluetooth® audio, the A2DP and AVRCP Bluetooth® audio profiles are connected automatically.

The mobile phone is then entered:

- in the Bluetooth® telephone list (▷ page 39)
- in the Bluetooth® audio device list (▷ page 84)

Mercedes-Benz recommends authorizing a mobile phone in Bluetooth® telephony (▷ page 40).


i If the mobile phone that is connected only supports two Bluetooth® profiles at the same time, the multimedia system may behave as follows:

- when connecting to the Internet, playback is stopped on the Bluetooth® audio device.
- when starting playback on the Bluetooth® audio device, the Internet connection is ended.

Searching for and authorizing a Bluetooth® audio device

Switching to Bluetooth® audio mode

- ▶ Press the **MEDIA** button.
- ▶ To select **Bluetooth Audio** in the menu: turn and press the controller.
A menu appears.
If you see the **No Bluetooth Audio Device Authorized** message, you will need to authorize the Bluetooth® audio device first.
- ▶ To select **Options** in the Bluetooth audio menu: slide **⌵** and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
A new menu appears.

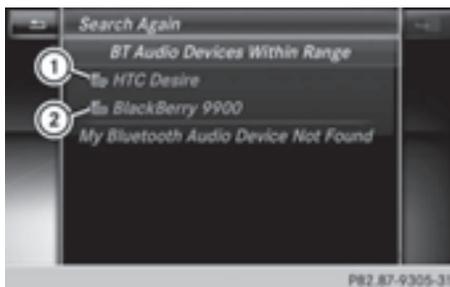

- ① Bluetooth® audio player within range and already authorized
- ② Newly detected mobile phone with Bluetooth® audio mode in range

The Bluetooth® device list displays all authorized devices, whether they are within range or not. After a device search, devices which are within range but not authorized are also displayed.

Searching for Bluetooth® audio

- ▶ To select **Search for Audio Devices**: press the controller.
The **To connect your audio device, make sure that:** 1. The device is switched on. 2. The Bluetooth Audio function is activated and the audio device is visible via Bluetooth. (For details, see the separate operating instructions of your audio

device or visit www.mercedes-benz.com/connect.) message appears.

▶ Select **Start Search**.

The multimedia system searches for Bluetooth® audio devices within range and adds them to the Bluetooth® device list.

The duration of the search depends on the number of Bluetooth® audio devices within range and their characteristics.

- ❗ With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data. Bluetooth® must also be given as a media output location for the audio device used.

Authorizing Bluetooth® audio

- ▶ Select a Bluetooth® audio device that has not yet been authorized from the list: turn and press the controller.
- Authorization starts.

Depending on the Bluetooth® audio device used, you now have two options for continuing with authorization.

Option 1: entering the passkey

- ▶ You can find information on this in the "Authorizing (connecting) a mobile phone" section (▶ page 40).
- After successful authorization, the Bluetooth® audio device is connected and starts playing.

Option 2: Secure Simple Pairing

- ❗ The Bluetooth® audio device must support Bluetooth® version 2.1 for connection via Secure Simple Pairing. The multimedia system creates a six-digit code which is displayed simultaneously on both devices that are to be connected.

For some Bluetooth® audio devices, the pairing must be confirmed within 10 seconds.

- ▶ If the number code displayed on the multimedia system and on the Bluetooth® audio device is the same, select **Yes**: press the controller.

If you select **Yes**, authorization continues and the Bluetooth® audio device is connected. Playback starts.

If you select **No**, authorization will be canceled.

External authorization

If the multimedia system does not find your Bluetooth® audio device, this may be due to particular security settings on your Bluetooth® audio device. In this case, check whether your Bluetooth® audio device can locate the multimedia system.

The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ Switch on Bluetooth® audio mode (▶ page 87).
- ▶ To select **Options**: slide  and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
- ▶ To select **Connect via Audio Device**: turn and press the controller.
A message appears.

Authorizing

- ▶ Start the authorization on your Bluetooth® audio device (see the manufacturer's operating instructions).
- After successful authorization, the Bluetooth® audio device is connected and starts playing.

With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data.

Reconnecting a Bluetooth® audio device

The Bluetooth® audio profiles are connected automatically under the following circumstances:

- one of the last two mobile phones to have been connected has also been used as a Bluetooth® audio player (if this function is supported by the mobile phone).
- the mobile phone is automatically connected. The Bluetooth® audio profiles are then also connected.

- ❗ For an automatic connection with the multimedia system, the telephone must be within range.

For most Bluetooth® audio devices, the "automatic connection" must be activated by

checking a box. Depending on the device used, this prompt often takes place when authorizing (see the manufacturer's operating instructions).

If the **No Bluetooth Audio Device Connected** message appears, you have two options to reconnect the Bluetooth® audio device.

Option 1:

- ▶ To select **Connect Last Used Player** in the basic display: press the controller. If the multimedia system can locate the Bluetooth® audio device, it will be connected and start playing.

Option 2:

- ▶ To select **Options**: slide $\odot \downarrow$ and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
- ▶ To select a Bluetooth® audio device: turn and press the controller. If the Bluetooth® audio device has been authorized, playback starts.

Bluetooth® audio device and simultaneous search for mobile phones

- i** When searching for a mobile phone or a new Bluetooth® audio device, the connection to an already activated Bluetooth® audio device is separated (▷ page 39).

In the Bluetooth® audio basic display, you will see the **No Bluetooth Audio Device Connected** message, and the **Connect Device** menu item cannot be selected.

Displaying details

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller.
- ▶ To select the symbol to the right of the Bluetooth® audio device: slide $\odot \rightarrow$ the controller.
- ▶ To select **Details**: turn and press the controller. The following information concerning the selected mobile phone is shown:
 - Bluetooth® name
 - Bluetooth® address
 - Availability status (shown after an update)
 - Authorization status

- ▶ **To close the detailed display**: press the \leftarrow button.

De-authorizing (deregistering) a Bluetooth® audio device

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller.
- ▶ To select the symbol to the right of the Bluetooth® audio device: slide $\odot \rightarrow$ and press the controller.
- ▶ To select **Deauthorize**: press the controller. A prompt appears asking whether you really wish to deauthorize this device.
- ▶ To select **Yes** or **No**: turn and press the controller. If you select **Yes**, the device will be deleted from the Bluetooth® device list. If you select **No** the process is canceled.

- i** Before re-authorizing the Bluetooth® audio device, you should also delete the device name **MB Bluetooth** from your Bluetooth® audio device's Bluetooth® list (see the Bluetooth® audio device's operating instructions).

Bluetooth® audio basic display



- ① Audio transmission status (depending on the Bluetooth® audio device, also title name and artist)
- ② Data medium position in the media list
- ③ Sound settings
- ④ Device list
- ⑤ To stop \parallel or start \blacktriangleright playback

- ⑥ Name of the connected Bluetooth® audio device (example)
- ⑦ Options menu

Some mobile phones only support two Bluetooth® profiles at the same time (e.g. Hands-Free Profile for Bluetooth® telephony and Bluetooth® audio profile for audio streaming). If you activate Bluetooth® audio mode and there is already an active Internet connection, this can cause the connection to be terminated.

Switching to Bluetooth® audio

- ▶ Press the  button.
 - ▶ To select **Bluetooth Audio** in the menu: turn and press the controller. The multimedia system activates the Bluetooth® audio device. The basic display then appears. Playback starts.
- i** If the Bluetooth® audio device connected supports metadata and corresponding data is available, then the artist, track and album name can be displayed.

Starting/stopping playback

- ▶ **To select Start playback** : turn and press the controller. Playback starts.  is selected.
- ▶ **To stop playback: select** . A message appears.  is selected.
- ▶ **To continue playback: select** . A message appears.  is selected.

Starting playback if the Bluetooth® audio device has been stopped

During the search for mobile phones, the connection with the Bluetooth® audio device is terminated (> page 39). In the Bluetooth® audio basic display (> page 87) you will see the **No Bluetooth Audio Device Connected** message and the **Connect Last Used Player** menu item cannot be selected.

When the search is finished, the Bluetooth® audio device can be reconnected.

- ▶ **To select Start playback** : slide  and press the controller. Playback resumes from the beginning.

- ▶ To select **Connect Last Used Player**: press the controller. Depending on the Bluetooth® audio device used, playback starts immediately or you must start playback manually. In this case, you will see the **Bluetooth Audio Device Paused** message.

i If there is an Internet connection and the mobile phone that is connected only supports two Bluetooth® profiles at the same time, the Internet connection is interrupted.

Selecting a track

The function is not supported by all Bluetooth® audio devices.

Some mobile phones impair function with regard to the following criteria:

- the number of tracks that can be selected
 - the time period until the next or previous track is played
- ▶ Use the multifunction steering wheel to switch to the media menu in the on-board computer (see the vehicle Operator's Manual).
 - ▶ **To skip forwards or backwards to a track:** press the  or  button on the multifunction steering wheel.
 - ▶ **Rapid scroll:** press and hold the  or  button on the multifunction steering wheel until the desired track is reached. If you press and hold the  or  buttons, the rapid scrolling speed increases after a short time.

Further ways to select tracks (> page 81).

i In rapid scroll, track names are not shown, but instead only Track 1, Track 2 etc. The playback times for the tracks played are not displayed. This is available as an optional function starting with AVRCP Version 1.3. There is also no music search option available with Bluetooth® Audio.

Selecting playback options

If the Bluetooth® audio device supports the corresponding function, the following options are available:

- **Normal Track Sequence:** the tracks are played in the normal order (e.g. track 1, 2, 3 etc.).

Audio data playback is determined by the order in which the tracks are written to the data medium. Alphabetical order is the most common. Once all the tracks in a folder have been played, the tracks in the next folder are played.

- **Random Track List:** the current track list is played in random order (e.g. 3, 8, 5 etc.).

- **Random Medium:** all tracks on the data medium are played in random order (e.g. track 3, 8, 5 etc.).

Playback options are optional functions and are not, or only partially, supported by Bluetooth® audio devices.

Selecting playback options

- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Playback Mode.**
A • dot indicates the current setting.
- ▶ Select the desired option.
If you select **Random Track List**, you will see a corresponding message in the display or selection window.

Increasing the volume in the multimedia system

- ▶ To select **Options:** slide $\odot \downarrow$ and press the controller.
- ▶ To select **Volume:** turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select **Standard** or **Boost.**
Information on sound settings (▷ page 92).

Operation with the Media Interface

General notes

Media Interface is a universal interface for the connection of mobile audio devices.

The USB connection sockets are located in the stowage compartment under the armrest.

Media Interface basic display



- ① Main function bar
- ② Display for the active data medium
- ③ Media menu bar
- ④ Title display in the media list
- ⑤ Current track and number in the track list
- ⑥ Numerical time display
- ⑦ Graphic time display
- ⑧ Additional display area with cover view

Switching to Media Interface

- ▶ Connect the data medium to a suitable USB socket (▷ page 79).
- ▶ Select the basic menu for the Media Interface (▷ page 77).
If playable media files are found, they will be played by the multimedia system.
If you remove a device, the **No Device Connected** message appears.

Supported devices

The following data media can be connected to the multimedia system via Media Interface:

- iPod®
- iPhone®
- iPad®
- MP3
- USB devices

- ❗ It is not possible to run two Apple® devices simultaneously.

i iPod®, iPhone® and iPad® are registered trademarks of Apple Inc., Cupertino, California, USA.

i Audio and picture files can be played back. Picture files from Apple® devices and MP3 players cannot be displayed (except cover pictures).

For details and a list of supported devices, visit our website at

<http://www.mercedes-benz-mobile.com/>. Then follow the instructions in the "Media Interface" section.

Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

Supported data formats

| | |
|--------|---------------------|
| Music | mp3, wma, aac |
| Images | jpg, jpeg, bmp, png |

Selecting a music file

Selecting with the controller

- ▶ **To display the current track list:** press the controller in the basic display. The track list for the active data medium appears.
- ▶ To select a track: turn the controller and press to confirm.
- ▶ **To skip forwards or backwards to a track:** turn the controller in the basic display. The selected track is played.

Fast forward/rewind

- ▶ With the media source active in the basic display, slide ◀Ⓞ▶ the controller and hold it until the desired position has been reached.

Search function

Selecting Search using media menu bar

- ▶ Slide Ⓞ↓ the controller.

The media menu bar appears.

- ▶ To select **Search**: turn and press the controller.

The category list appears.

Overview

The following categories are listed:


- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Tracks**
- **Genres**
- **Year**
- **Composers**
- **Photos**
- **Audiobooks**
- **Podcasts**
- **iTunes U**
- **Genius Mixes**

- i** The functions are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these functions are available more quickly.


The categories Audio Books, Podcasts, iTunes U® and Genius Mixes® are only available for Apple® devices.

When connecting Apple® devices, the categories "Folder", "Year" and "Photos" are not available.

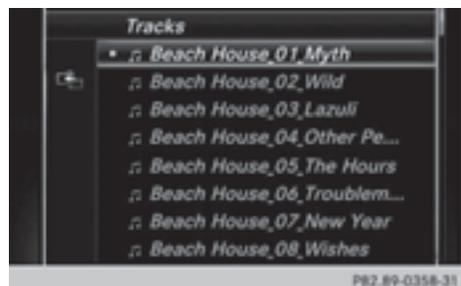

- ▶ To select a category, e.g. **Current Track-List**: turn and press the controller. The selection list appears.
- ▶ Select the required track.
- ▶ **Keyword search**: using the controller, enter the characters for the desired search term and confirm (▷ page 83). Search results are sorted according to the available categories, displayed and can then be selected.

Playback options

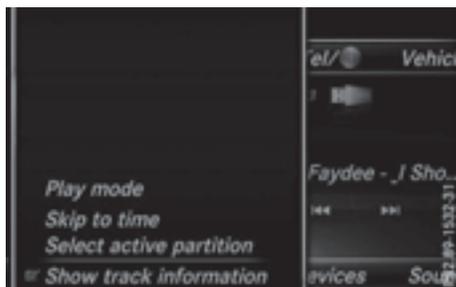

- ▶ Select playback options (▷ page 80).
- ⓘ This is only possible if the Genius function is activated in iTunes followed by a synchronization of the Apple® device with iTunes again.

Picture viewer

General notes

If pictures are stored on a connected medium (except on Apple® devices), you can view these on the multimedia system.

The following data media and picture formats are supported:

- **Data media**: CD, USB devices, SD memory cards
- **Picture formats**: jpeg, jpg, bmp, png


The maximum image resolution is 20 megapixels for jpeg, jpg and 1.5 megapixels for bmp, png.

Displaying pictures

- ▶ In the media basic display, press the controller. The **Search** with a category list appears.
- ▶ To select **Photos** in the category list: turn and press the controller. A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture. If there is no picture on the data medium, an empty list is shown. You can search for pictures on other data media.

Searching for pictures on other data media

- ▶ In the directory list, slide ←⊙ the controller. The device list appears.

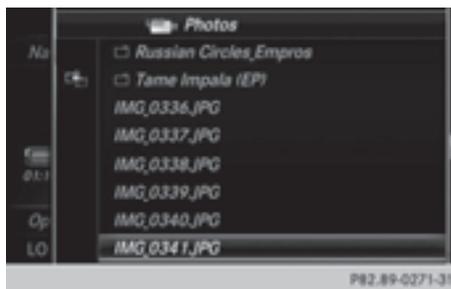


Example: the directory list displays the existing picture files

- ▶ To select a data medium with picture files: turn the controller and press to confirm. A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture.

Starting a slide show

- ▶ While viewing a picture, press the controller. The image menu appears.
- ▶ To select **Start Slideshow**: turn and press the controller. The slide show starts.
- ▶ To end the slide show: press the controller. The image menu appears.
- ▶ Select **End Slide Show**.

Changing the picture view

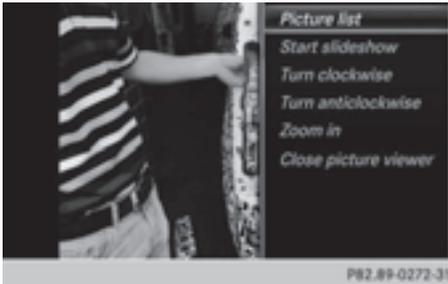

- ▶ Press the controller.
The image menu appears.
 - ▶ To select **Turn Clockwise**: turn and press the controller.
The picture rotates 90 degrees.
 - ▶ Select **Turn Counterclockwise**.
The picture rotates 90 degrees.
 - ▶ Select **Zoom In**.
The size of the picture increases.
After you have zoomed into the picture, you can move the section of the picture.
 - ▶ To move the section of the picture: slide $\uparrow \odot \downarrow$ and $\leftarrow \odot \rightarrow$ the controller.
 - ▶ To revert to the original size: press the controller.
- or
- ▶ Press the  button.

Closing the picture viewer

- ▶ Press the controller.
The menu appears.
- ▶ To select **Close Picture Viewer**: turn and press the controller.
The multimedia system returns to the last accessed media function.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Sound settings

Calling up the sound menu

The sound settings can be selected to suit a variety of different audio sources. It is possible to set more bass for radio mode than for audio CD mode, for example. The respective sound menu can be called up from the menu of the desired mode.

- ▶ Switch to radio mode (▷ page 68).
or
- ▶ Switch to media mode (▷ page 76).
- ▶ To display the menu bars: slide  the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Balance/Fader**.

Sound menu overview


| Function | Options |
|---------------|---|
| Equalizer | Sets treble, mid-range and bass |
| Balance/fader | Adjusts the volume: right/left and front/rear |

Setting treble, mid-range and bass



- ▶ Call up the sound menu (▷ page 92).
- ▶ Turn the controller until **Equalizer** is brought to the front.
- ▶ To activate rotary menus for treble, mid-range and bass: slide  the controller.
- ▶ To switch between the rotary menus: slide  or  the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. Rotary menus show the set values.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to the basic menu: press the  button briefly.

Adjusting the balance/fader

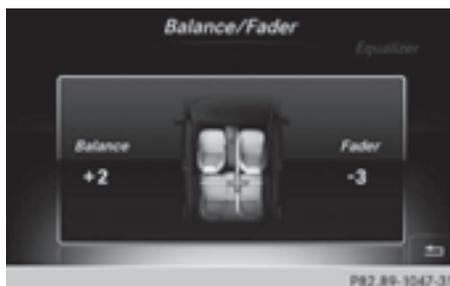

Balance adjusts the volume left and right. Fader adjusts the volume in front and rear.

For the best sound, setting 0 is recommended.

- ▶ Call up the sound menu (▷ page 92).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide  the controller.
- ▶ To activate the menu for balance and fader: press the controller.

- ▶ To adjust the balance: slide ◀⊙ or ⊙▶ the controller.
- ▶ To adjust the fader: slide ⊙↓ or ↑⊙ the controller.
- ▶ To return to the basic menu: press the  button briefly.

Harman/kardon® Logic 7® surround sound system

General notes

The harman/kardon® Logic7® surround sound system is available for all functions in the radio and media modes.

The harman/kardon® Logic7® surround sound system is available for the following operating modes:

- Radio (FM only)
- Satellite radio
- Audio CD
- MP3 (including SD memory card and USB storage device)
- Media Interface
- Bluetooth® audio mode

- ▶ **i** For the best sound, CD or WAV CD format is recommended. For data-reduced media, AAC with a data rate of 320 kbit/s is recommended.

Calling up the sound menu

The sound settings can be selected to suit a variety of different audio sources. It is possible to set more bass for radio mode than for CD audio mode, for example. The respective sound menu is called up from the menu of the desired mode.

- ▶ Switch to radio mode (> page 68).
- or
- ▶ Switch to media mode (> page 76).
- ▶ To switch to the menu bar: slide ⊙↓ the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Balance/Fader**.

Overview of harman/kardon® Logic7® surround sound system


| Function | Options |
|---------------|---|
| Equalizer | Sets treble, mid-range and bass |
| Balance/fader | Adjusts the volume: right/left and front/rear |
| Logic 7 | Optimizes the sound playback |

Setting treble, mid-range and bass



- ▶ Call up the sound menu (> page 93).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ To activate rotary menus for treble, mid-range and bass: slide ⊙↓ the controller.
- ▶ To switch between the rotary menus: slide ◀⊙ or ⊙▶ the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. The rotary menus show the set values.
- ▶ To return to the menu: slide ↑⊙ the controller.
- ▶ To return to the basic menu: press the  button briefly.

Adjusting the balance/fader

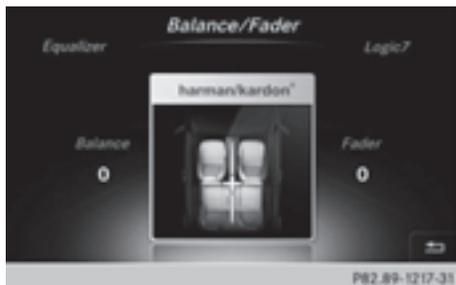

Balance adjusts the volume left and right. Fader adjusts the volume in front and rear.

For the best sound, setting 0 is recommended.

- ▶ Call up the sound menu (> page 93).
 - ▶ Turn the controller until **BaLance/Fader** is in the center.
 - ▶ Slide $\odot\downarrow$ the controller.
 - ▶ To activate the menu for balance and fader: press the controller.
 - ▶ To adjust the balance: slide $\leftarrow\odot$ or $\odot\rightarrow$ the controller.
 - ▶ To adjust the fader: slide $\odot\downarrow$ or $\uparrow\odot$ the controller.
- An image shows the sound focus set.
- ▶ To return to the basic menu: press the \leftarrow button briefly.

- ▶ Slide $\odot\downarrow$ the controller.
The left-hand rotary menu to switch surround sound on and off is activated.
- ▶ To switch **Logic7** on or off: turn the controller.
- ▶ To return to the menu: slide $\uparrow\odot$ the controller.
- ▶ To return to the basic menu: press the \leftarrow button briefly.


For the optimum audio experience for all passengers when Logic7® is switched on, the balance settings should be set to the center of the vehicle interior.

MP3 tracks should have a bit rate of at least 128 kbit/s.

Surround sound playback does not function for mono signal sources, such as for AM radio mode.

If radio reception is poor, e.g. in a tunnel, you should switch off Logic7®, since it may otherwise switch dynamically between stereo and mono and cause temporary sound distortions.

Setting surround sound

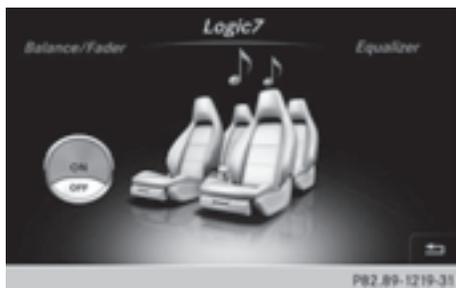

The **Logic7** setting optimizes the sound playback.

- ▶ Call up the sound menu (> page 93).
- ▶ Turn the controller until **Logic7** is in the center.

